

MERCEDES B-CLASS - 2011 TO 2018

Our ref: H0606

3 VARIATIONS FOR THE CAR

The B-Class has 3 different floor levels, please check the guide below to choose the correct boot liner for your car.

FLOOR RAISED

H0606-FRSD


- The false floor has been raised to its highest position. ⚠
- The floor is level with the tail-gate plate.



FLOOR LOW

H0606-FLOW

- The false floor has been moved to its lowest position ⚠
- The floor is a stepdown from the tailgate plate
- There is a protruding plastic step between the floor and the seat


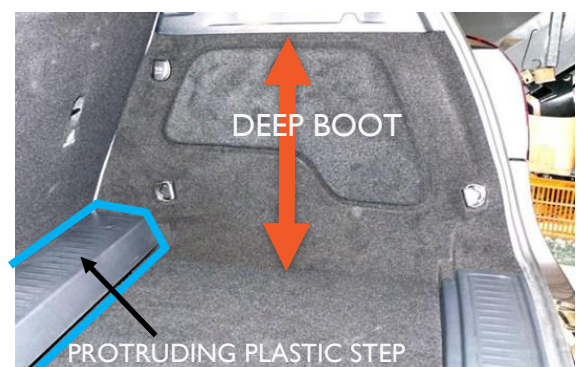


3RD OPTION ON NEXT PAGE

NO FALSE FLOOR

H0606-FNO

- There is **NOT** a Vario Floor/
False Floor
- The floor is a stepdown from the
tailgate plate
- There is **NO** protruding plastic
step between the floor and the
seat (*Refer to Floor Low*)

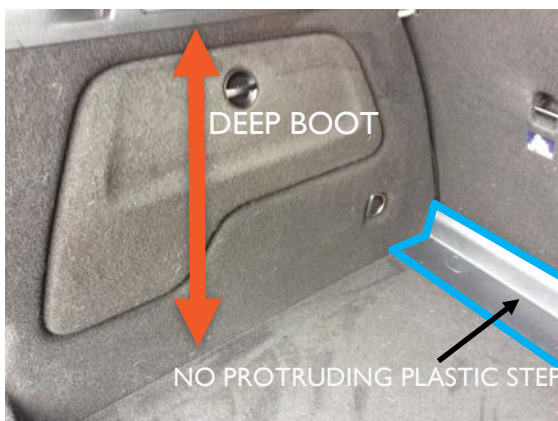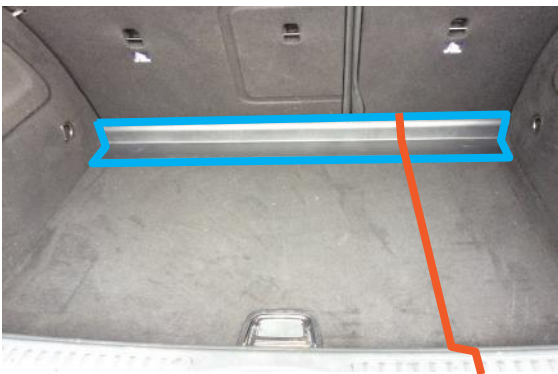

IMPORTANT ATTENTION

*Once the Bootliner is fitted you
cannot lower or raise
the false floor*

RECLINED

H0606-SEREC

- Rear seat uppers are fully reclined
- Provides more passenger comfort
- Less boot space



Fully reclined




Measurement to check your seat upper rake

UPRIGHT

H0606-SEUP

- Rear seat uppers positioned 4 notches up from the fully reclined position
- Provides less passenger comfort
- More boot space

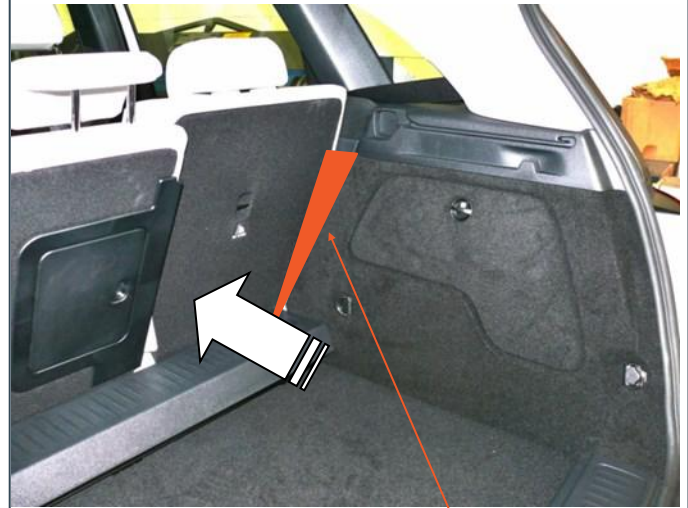

4 notches up from the fully reclined position



Measurement to check your seat upper rake