

FITTING INSTRUCTIONS

hatchbag.co.uk

MERCEDES C Class Estate 2014 to 2021

Our ref: Ho607 - level floor

Packing Requirements

BOOTLINER

4 x ref: 121 (plastic + loop fastener) 1mtr of cut length of 20mm self-adhesive loop fastener 1.2mtr of cut length of 30mm self-adhesive loop fastener

Minimum of 8 self-adhesive loop fastener tabs

REAR DOOR COVER

Minimum of 17 self-adhesive loop fastener tabs



VERY IMPORTANT PREPARATION

REF: 121

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the Bootliner to the plastic trim (**Not** the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be** a **build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth. NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



PREPARATION

- Remove the load cover. It may be replaced later.
- Remove any additional carpet / rubber mats.
- Unlock the rear seat back rests and recline.
- Unfold the Hatchbag and place in the vehicle. The panel with the Hatchbag label sits against the back of the rear seat.

Please note these photos are non-specific to your car.

BASE

- Position the base of the Bootliner snugly into place.
- Start at the tailgate end.
- Cut to length and use the 20mm wide selfadhesive loop fastener to attach to the tailgate plate.






BASE cont.....

- Front end: Push the two foam filled tabs down into the void between the rear seat and the boot floor.
- Re-lock the rear seat back rest to trap these tabs.

Please ensure you position the base centrally: ensure you do not drag it to one side before trapping the foam tabs.



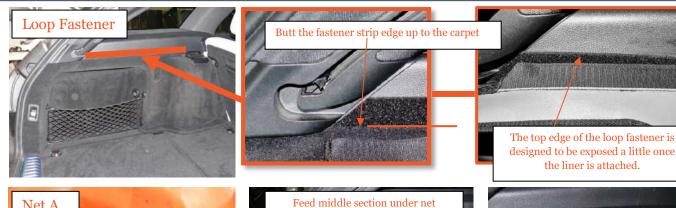







SIDES

• Cut to length and attach the 30mm wide self-adhesive loop fastener to the plastic trim just above the carpet.

Net A:

- Unfasten the two hook & loop fastener seams: **
- Unclip the bottom of the net and swing upwards
- Feed the middle section of the side under the net.
- Drop the net down again.
- Re-fasten the two fastener seams
- Position the side panel snugly into place.
- Re-fasten net.







Net B:

Proceed as above, but you leave the net fixed: the gap is big enough to pass the middle section under.

SIDES cont.....


- Cut to length and attach the 30mm wide self-adhesive loop fastener strip to the plastic trim just above the carpet.
- Position the side panel snugly into place.



• You can fold in the end corners of the fasteners





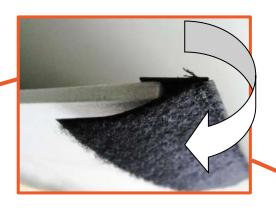



Please note these photos are non-specific to your car.

REF: 121 clips

- At the tailgates end: Pull back the rubber seal and slide the plastic part of the clip (ref. 121) behind the carpeted panel. The loop fastener section will remain exposed.
- Re-align with the hook fastener welds on the liner and fasten.

Rear Plus / Split versions

The two ties at the front of the sides fasten to the rear seat locking "D" rings. Only use when you have folded flat the corresponding seat: fasten loosely.

FITTING FRONT

• Pass the hook & loop fastener straps around each corresponding post and fasten back onto itself.

REAR PLUS VERSIONS

 YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS / HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS



Optional Extras

Please note the following photos are non-specific to your vehicle

TAILGATE COVER

• Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.





