

# AUDI Q7 - 7 seater ( 3rd row folded) - 2015 Onwards

our ref: H0611-HYNO

## FITTING KIT CONTENTS :

### BOOT LINER

- 4 x Ref:124 (cut at 200mm long)
- 28 x Ref:113 frequent use fastener tabs
- 1200mm x 20mm wide self-adhesive loop fastener
- 4 x 200mm x 20mm wide self-adhesive loop fastener



Rear Plus with Seat Split boot liner

### WINDOW SILL FLAP

- 900mm x 20mm wide self-adhesive loop fastener
- 6 x tabs self-adhesive loop fastener



REF:113



REF:124

### TAILGATE COVER

- 19 x tabs self-adhesive loop fastener

## STEP I. PREPERATIONS

Please ensure that the 3rd row seats are folded down flat. These seats will not be usable with the Hatchbag installed.

Please ensure that the rear seat (2nd row) backs are positioned correctly to suit the liner. The seats should be at a incline parallel to the seam on the car wall (shown below)



SET THE REAR SEAT RECLINE TO BE PARALLEL WITH SHOWN LINE



TOO FAR BACK WILL CREASE THE HATCHBAG.



TOO FAR FORWARD WILL PULL HATCHBAG OF THE SEAT.

## VERY IMPORTANT PREPARATION

To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:


1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



*\*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*

## STEP 2. FITTING BASE

- Unlock the rear seats ( Row 2) and recline enough to expose the 3<sup>rd</sup> row headrest posts.
- Unfold the boot cover and place in the vehicle so that the base fits snugly in position. The panel with the Hatchbag label sits against the back of the rear seat.
- Attach the two ties sewn onto the under face of the base panel to the outer headrest posts on the 3<sup>rd</sup> row seats (**image A**) (avoid pulling the base into the void by tying too tightly)
- Raise the 2<sup>nd</sup> row seats to the angle shown in step 1 on the previous page.

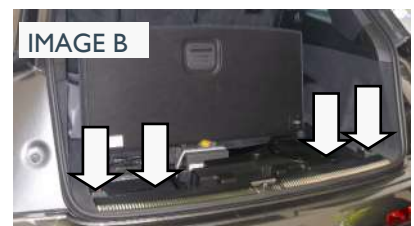

The rear end of the base panel will be fastened to the inner vertical face of the chrome plate at the rear of the boot . Raise the boot false floor lifting the base panel with it (**image B**) .

Fasten the **4 x 200mm x 20mm wide** self-adhesive loop fastener strips to the hook section of the **4 x Ref:124**

Placing 2 either side of the central lock as shown in **image B** Fasten the adhesive section to the inner vertical face of the chrome plate as illustrated in **image C**

Close the false floor making sure the loop fastener section of the tabs extend above the floor .(**image D**) Attach the hook fastener on the underside of the base panel to them. (**image E**)

### STEP 3. FITTING THE FRONT

- Starting with the middle headrest loop the hook & loop fastener straps around both headrest posts. **(image F)**. Makes sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.



### STEP 4A. FITTING THE SIDES - WITHOUT OPTIONAL SILL FLAPS

- Attach some of the Ref:113 frequent use fastener tabs to the carpet surface around the storage area (the back left side of the boot) in line with the hook fastener tabs on the boot liner as shown in **image G**. (These tabs will enable you to regularly access the storage net on the left side of the boot without “Fluffing up” the carpet.) *(Note: should you plan to remove and replace your Bootliner regularly we suggest you use the entire pack of Ref:113 tabs on both the nearside and offside where the hook fastener attaches to the carpet!)*



- Attach the hook fastener on the top edge of the boot liner sides directly onto the carpet/ref:113 **(Image H)**.



Attach the side panel between the carpeted area and the rear seats using **1200mm x 20mm wide** self-adhesive loop fastener on the plastic panel. Cut the loop fastener strip to size. **(image I)**.



### STEP 4B. FITTING THE SIDES - WITH OPTIONAL SILL FLAPS




Attach the self-adhesive loop fastener strip along the entire length inside of the grill, cutting the **900mm wide** strip to length. **(image J - orange highlights)**



- Attach the top edge of the sill flaps onto this fastener strip and attach the bottom edge of the flap directly onto the top edge of the carpet that lines the side of the boot **(image K - white arrow)**. Repeat on opposite side



Use the **6 x tabs** self-adhesive loop fastener to fasten the remaining hook fasteners to the plastic **(image K - orange highlights)**

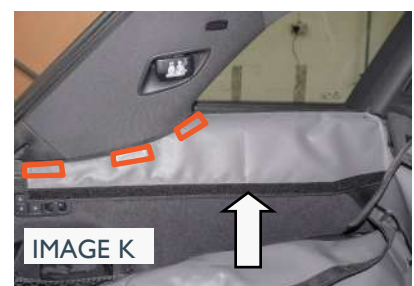

- Next follow the instructions in step in 4A to complete the attachment of the side panels.



# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. **(Image L)**
- The flap is then placed over the rear head rests and down the front of the passenger seats. **(Image M)**
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.
- The Seat Flap can also be used in conjunction with the Rear Plus or Split Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. **(Image N)**



## STEP 5B. TAILGATE COVER



Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. **(image O)**

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5C. BUMPER FLAP

- Fit the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. **(Image P)**
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS PAGE 2

Please note: the following photos are not specific to your vehicle.

### STEP 5D. BOOTLINER EXTENSION

The Bootliner extension provides superior protection for the rear seats when purchased with a REAR PLUS option. (Image 6)

- The Bootliner Extension is designed to attach to a Rear Plus version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It offers no protection to the rear doors
- Attach the Bootliner Extension to the main bootliner (Image 6)



The Seat Flap 5A, Bumper Flap 5C and Bootliner Extension 5D cannot be added at a later date