

FORD MONDEO ESTATE - 2014 on

Our ref: Ho614

PACKAGING REQUIREMENTS.

BOOTLINER

No additional fixings

WINDOW SILL FLAPS

• 6 x tabs self-adhesive loop fasteners

TAILGATE COVER

• 20 x tabs self-adhesive loop fasteners





VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth.**

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.





STEP I. PREPERATIONS

• Remove the load cover. It may be replaced later. (image A)

Please note not all of the photographs are specific to your vehicle



STEP 2. FITTING BASE

• Place the bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image B)

WITHOUT OFFSIDE SPEAKER ONLY:

• Push the pockets on both sides of the boot into the recesses (image C)

WITH OFFSIDE SPEAKER ONLY:

 Push the Nearside pockets into the recesses (image C)





STEP 3. FITTING THE FRONT

- PLUS / SPLIT VERSION ONLY fasten the hook and loop fasteners between the side panel and the seat panel. (image D)
- Starting with the middle headrest loop the hook and loop fastener straps around both headrest posts. (image E). Makes sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right seat.

REAR PLUS VERSIONS

You MUST unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. ('Please refer to REAR PLUS options on website to see detailed photo')





STEP 4A . FITTING THE SIDES - WITH OUT WINDOWSILL FLAPS

- Attach the sides of the bootliner along the top edge of the carpeted area of the boot sides. Firmly press the sides above the pocket to securely fasten the hook fastener wekds to the carpet. (image F)
- The carpet sides go up to and attach to the peak of the ridge at the back end of the sides (image G)





STEP 4B . FITTING THE SIDES - WITH WINDOW SILL FLAPS

- Firstly attach the window sill flaps before attaching the boot liner side panels.
- With the flat end towards the rear seats, and the angled end towards the tailgate side put the flaps on the window sills of the car with the hook fastener on the under side and the loop fastener on the visible side (image H)
- The long strip of hook fastener on the bottom fastens to the top edge of the carpeted area of the boot sides (image H)



The 3 fastener tabs welded on the top of the sill flaps fasten to the plastic top panel under the windows using 3 self adhesive fastener tabs for each sillflap. (image I)

- Attach the sides of the bootliner onto the loop fastener along the bottom edge of the sillflaps. image J)
- The bootliner sides go up to and attach to the peak of the ridge at the back end of the sides (image K)









OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.


STEP 5B. TAILGATE COVER

• Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)

• Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound

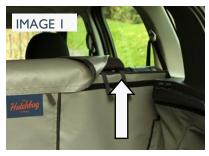









OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The "Floor extension" offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER (*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*)

STEP 5E. FREQUENT USE KIT

If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet will "fluff" up

 we have an alternative "Frequent Use Fitting Kit"

The Frequent Use Kit is available to buy from our "online" Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.





