

VOLVO XC90 - 2015 on

3RD ROW USABLE

Our ref: Ho618-RW3USED

PACKAGING REQUIREMENTS.

BOOT LINER

- **10x tabs** self-adhesive loop fastener
- **2x ref. 121 tabs** (plastic & loop fastener)
- **4x ref 124** at 160mm length
- **2x 405mm** 20mm self adhesive Loop Fastener



REAR DOOR COVER

- **27x tabs** self-adhesive loop



REF:121



REF:124



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any Hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The Hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.





STEP 1. PREPERATIONS

- Remove the load cover. It may be replaced later.
- Please place the 3rd row seats in an upright position.

Please note not all of the photographs are specific to your vehicle

STEP 2. FITTING BASE

- Line up 2x ref:124 to the chrome strip on both sides of the boot (total 4). **(image B)**
- Lift up the false floor and attach the ref:124 to the inside plastic surface next to the chrome strip using 2 self adhesive loop fastener tabs for each ref:124 (total 8). **(image C+D)**
- Attach the hook fastener portion of the ref:124 to previously attached loop fastener tabs. Then lower the false floor with the loop portion protruding out. **(image E)**
- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges.
- Tilt the 3rd row seats forward slightly and push the foam tab sewn onto the base of the boot line into the gap between the floor and the seat. **(image F)** Return the 3rd row seats to an upright position trapping the foam tab.
- Pull the base taut from the rear and secure it to the ref:124 sticking out from the false floor. **(image G)**
- Attach the ref:121 clips to both sides of the boot door opening. To do this pull back the rubber edge and push the plastic section of the clip behind the boot panel **(image H)**. Slide the clip down to the same level as the hook fastener weld on the boot liner. **(image I)**

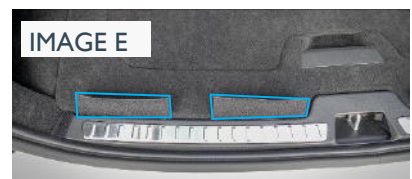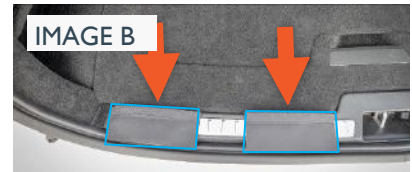

STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fastener between the side panel and the front panel. (image J)
- For the left and right headrest: Pass the Elastic & hook fastener straps through the middle of the headrest and around to fasten them to the loop hook fastener patch on the front panel of the boot liner. (image K)

REAR PLUS/SPLIT VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS options on website to see detailed photo*)

This Boot liner includes a Rear Plus/Split FLAP that covers the full seat when folded down,

- attach the flap to the loop fasteners strip across the front panel. (image L&M)
- If both seats are dropped down together then attach the long edge of the flap onto the loop fasteners strip sewn on the front panel

REAR SPLIT VERSION ONLY

- If only 1 seat is dropped down (split only), attach the short side of the flap onto the section of the front panel being dropped down.



STEP 4 FITTING THE SIDES

- Stick the long self adhesive loop fastener strips onto the plastic above the top edge of the carpet (image N) to which the side of the boot liner will attach.



OPTIONAL EXTRAS


Please note the following photos are non-specific to your vehicle

STEP 5A. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5B. BUMPER FLAP

- Fit Boot liner
-  Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



STEP 5C. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the second row seats and the extended floor area when the third row seats are folded flat.
- The max width is 148cm (see photo on left).



PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER

The Bumper Flap 5B & The Floor Extension 5C cannot be added at a late date