

## VOLKSWAGEN UP - 2012 Onwards

Our ref: Ho619 (FNO & FOUT)

### PACKAGING REQUIREMENTS.

#### BOOTLINER

- **10 x tabs** self-adhesive loop fastener
- **2x 330mm cut lengths of 30mm wide** self-adhesive loop fastener

#### TAILGATE COVER

- **16 x tabs** self-adhesive loop fastener



PHOTO SHOWS REAR SPLIT PREPARED FOR SEATFLAP



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



### STEP I. PREPERATIONS

- If you have a false floor, please remove it. It may NOT be replaced later. (image A)
- Please remove the load cover cassette, it may be replaced later.
- Please ensure the bottom carpeted floor is flat



## STEP 2. FITTING BASE

- Place the boot liner into the car boot so that the panel with the Hatchbag logo folds up to the seat. Flatten the base so it fits snugly against the edges. (image B)



## STEP 3. FITTING THE FRONT




- PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panel and the seat panel. (image C)
- Loop the hook & loop fastener straps around both headrest posts. (image D). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the other headrest.




### REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to REAR PLUS options on website to see

## STEP 4A . FITTING THE SIDES

-  Attach the 330 mm long self adhesive loop fastener strip along the top of the small alcove and up to the point indicated by the orange arrow, ensuring the self adhesive loop fastener aligns with the hook fasteners on the boot liner sides. Snip the loop fastener strip at the corner indicated by the scissors to help fold it around the corner. (image E)
- Attach the boot liner sides to the previously attached loop fastener strip.
-  Attach 2 self adhesive loop fastener tabs on each side of the boot, on the black side panels in line with the hook fasteners welded onto the boot liner (image F)
-  Attach a further 5 self adhesive loop fastener tabs the metal back ridge in line with the hook fasteners welded on the boot liner back panel (image G+H)

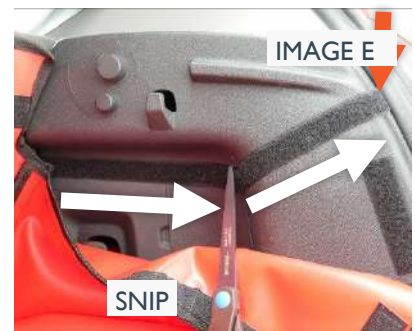

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



IMAGE 4



IMAGE 5



## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

## STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.

## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER (*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*)

