

## MERCEDES GLC - 2015 on

### HY(HYBRID)-SEREC (RECLINED)

Our ref: H0623

#### PACKAGING REQUIREMENTS.

##### BOOTLINER

- 4x Ref:121 75 mm
- 2x 460 mm 30mm wide self-adhesive loop fastener
- 2x 630 mm 20mm wide self-adhesive loop fastener

- 5x self-adhesive loop fastener tabs

##### TAILGATE COVER

- 20 x tabs self-adhesive loop fastener



REF:121



#### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



## STEP 1. PREPERATIONS

- Remove the load cover. It may be replaced later.
- Please set the rear seat recline to the most reclined position. (Image A)



*Please note not all of the photographs are specific to your vehicle*


## STEP 2. FITTING BASE

- Fold the rear seats flat prior to placing the bootliner into the boot.
- Place the bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image B)
- Push the foam tabs sewn onto the front end of the base into the slot between the base and the rear seats. Fold the seats back up trapping the foam tabs. (Image C)
- Familiarize yourself with the position of the 5 hook fastener welds on the reverse side of the liner at the tailgate end. Stick the 5 loop fastener tabs as shown on (Image D)
- Stick the 460mm self-adhesive loop fastener strips onto the chrome bars located on both sides of the tailgate end of the boot. (Image E)
- Attach the fasteners sewn and welded onto the underside of the bootliner base to the previously attached fasteners. (Image E)



### STEP 3. FITTING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panel and the seat panel. (image F)
- Starting with the middle headrest loop the hook & loop fastener straps around both headrest posts. (image G). Make sure to hold the front part of the base in position as not to pull the bootliner too far up. Repeat the procedure with the left and right seat.

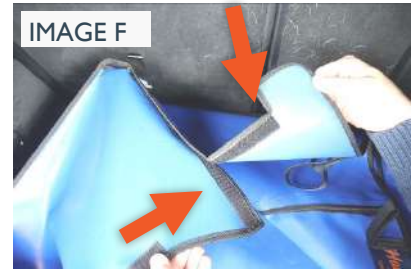


### REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to REAR PLUS options on website to see detailed photo)

### STEP 4 FITTING THE SIDES

- Please push the net on the near side net fully down. (the net will not be usable with the bootliner installed) (Image H)
- Attach the 20mm wide self-adhesive loop fasteners strips to the bottom edge of the side plastic panels just above the carpeted area. (Image I)
- Fasten the hook fastener sewn onto the top edge of the bootliner to the previously attached fastener strip. Push the bootliner pocket into the boots recesses on both sides so that they sit snugly in place. (image I)
- Insert 2 ref:121 fastener tabs on each side of the tailgate end of the boot. To do this peel back the rubber and slot the plastic end of the fastener tabs behind the boots carpeted panel. (Image J)
- Slide these fastener tabs up or down so that they align with the hook fasteners welded onto the rear sides of the bootliner. (Image K)

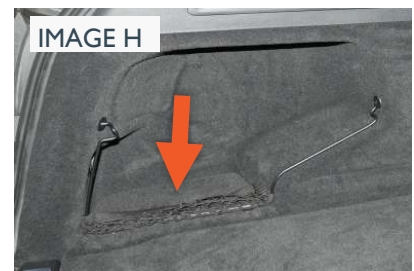

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

## STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER (*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*)

