

## VOLKSWAGEN TIGUAN - 2016 on

FLOOR - RAISED & LOW

SEATS - RECLINED & UPRIGHT

Our ref: Ho626- FLOW/FRSD & SEREC/SEUP

### PACKAGING REQUIREMENTS.

#### BOOT LINER

- **660mm** 30mm wide self-adhesive loop fastener
- **640mm** 30mm wide self-adhesive loop fastener
- **2 x 890mm** 30mm wide self-adhesive loop fastener

#### TAILGATE COVER

- **22 x tabs** self-adhesive loop fastener



IMAGE ABOVE IS THE RAISED BOOT LINER WITH SEATS RE-



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any Hook & loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The Hook & loop fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



## STEP 1. PREPERATIONS


- Please remove the load cover, it may be replaced once the boot liner has been fitted
- Please set your false floor to the correct level based on your order. (raised or lowered)

### SEATS RECLINED OPTION

- Set the incline of the seats to their most reclined position. (image A)

### SEATS UPRIGHT OPTION

- Set the incline of the seats so that the seatbacks are 13cm from the point shown in image B.

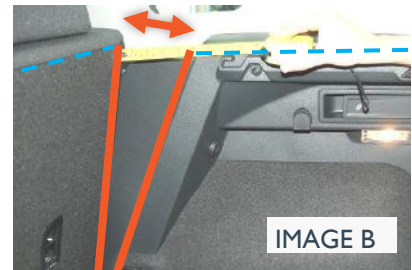

## STEP 2. FITTING BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image C)

### LOWERED FLOOR VERSION ONLY

- Fasten the front end of the base onto the step between the boot floor and the seat backs (image D). The base is slightly narrower & shorter than the boot floor at this point in order to go over the plastic extrusions on both sides of the boot.



## STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panel and the seat panel. (image E)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image F). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.



### REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the


## STEP 4. FITTING THE SIDES

- Place the side panels in position, pushing the boot liner pockets into the recesses on both sides of the boot. Push the metal D-ring through the holes on each side of the boot liner. (Image G)
- Attach the 640mm loop fastener strip onto the plastic on the top edge of the driver side recess. (Image H) Snip the loop fastener at the corners to ease them around the bends, lights and power plug.
- Repeat this step with the passenger side using the 660mm long loop fastener strip.
- Attach the hook fastener sewn onto the boot liner to the loop fastener stuck to both sides of the boot.



## STEP 4. FITTING BACK

- Attach the two 890mm loop fastener strips onto the plastic edge at on both sides of the tailgate lock going up the sides (Image I). Snip the loop fastener at the corners to ease them around the bends.
- Attach the boot liner to these loop fastener strips.

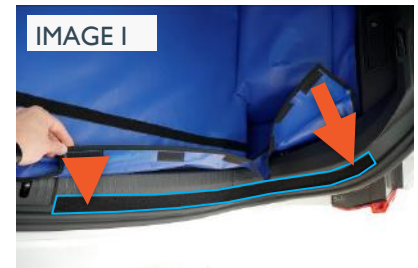

(RAISED FLOOR) PASSENGER SIDE OF BOOT



(RAISED FLOOR) DRIVER SIDE OF BOOT



(LOW FLOOR) PASSENGER SIDE OF BOOT



(LOW FLOOR) DRIVER SIDE OF BOOT

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### **STEP 5D. FLOOR EXTENSION**

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER

*(The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date)*