

MERCEDES GLA - 2014 - 2019

SEATS - RECLINED & UPRIGHT

Our ref: Ho627- SEREC/SEUP

PACKAGING REQUIREMENTS.

BOOT LINER

- 2 x 410mm of 30mm wide self-adhesive loop fastener
- 6 x REF:113



REF:113

TAILGATE COVER

- 18 x tabs self-adhesive loop fastener



Image above is the Upright Ski Spilt version prepared for a seat flap and Floor extension



Image above is the Reclined Standard version



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.



STEP 1. PREPERATIONS

- Please remove the load cover, it may be replaced once the boot liner has been fitted
- Ensure you set the incline of the seats to suit the seat rake you have ordered.


STEP 2. FITTING BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image A)




STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panel and the seat panel. (image B)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image C). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up.
- Locate the position of the 6 hook fastener welds on the reverse face of the liner front panel. Take the 6 x REF: 113 fastener tabs, fasten them onto the back seat carpet in alignment to these fastener welds. (image D). The tabs will remain on the seat at all times. When you wish to remove the Boot liner or fold the seats : carefully peel the liner off the tabs.
- Unlock the rear seat just enough to trap the upper corners behind the plastic moulding. (image E).

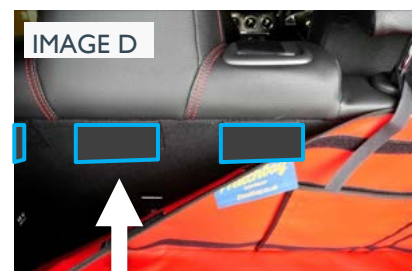

REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to REAR PLUS options on website to see detailed photo)

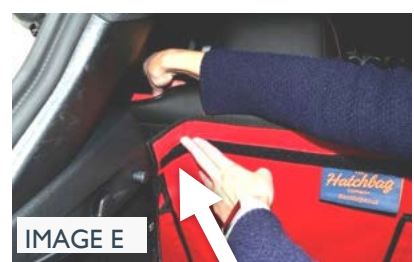

STEP 4. FITTING THE SIDES

- Place the side panels in position, pushing the boot liner pocket into the offside recess. (Image F)
- The hook fasteners sewn / welded onto the reverse face of the boot liner will attach directly to the carpet. (Image G)



STEP 4. FITTING BACK

- Attach the two 410mm loop fastener strips onto the plastic edge on both sides of the tailgate lock sides. (Image I).
- Attach the boot liner to these fastener strips.



RECLINED NEARSIDE



RECLINED OFFSIDE



UPRIGHT NEARSIDE



UPRIGHT OFFSIDE

OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The **Tailored** Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (image 1 & 2)
- The Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 3)



STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS / SPLIT option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



STEP 5E. SKI FLAP SPLIT

- Should you wish to utilise the Ski flap: unfasten the liner front panel first and fold back into the boot area.
- Open the plastic ski flap and fold back onto the back of the rear seat so that it magnetises flush to the seat.
- Reposition the liner front panel.
- The flap is designed to unfasten and fold back into the boot area.



PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER (*The Seat Flaps 5A, The Bumper Flap 5C, The Floor Extension 5D & The Ski Flap Split cannot be added at a late date*)

STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit”



The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.