

## PORSCHE MACAN - 2014 to 2024

Our ref: Ho632

### PACKAGING REQUIREMENTS.

BOOT LINER

- **2x 400 mm** 20mm wide self-adhesive loop fastener
- **7x tabs** self-adhesive loop fastener

TAILGATE COVER

- **21 x tabs** self-adhesive loop fastener



BOOT LINER WITH REAR SPLIT OPTION



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



### STEP I. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fastener welded to the back face fixes directly to the carpet. **(image A)**



## STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fastener between the side panels and seat panel. **(image B)**
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. **(image C)**. Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.




### REAR PLUS VERSIONS




You **MUST** unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

## STEP 4. FITTING THE SIDES AND BACK

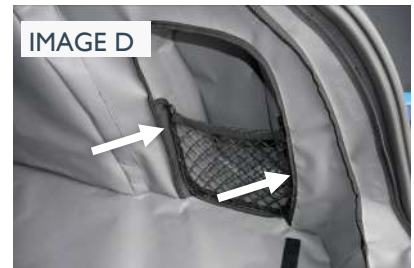- Position the offside pocket into the recess behind the net. The 2 strips of hook fastener will attach directly to the carpet in front of the net. Take care not to catch the net with the hook fastener. **(image D)**
- Reposition the rest of the side panels and fasten the hook fastener welded onto the top edge of the boot liner sides directly onto the carpet along top edge of the carpeted boot sides. **(image E+F+G)**



## STEP 4. CONTINUED

-  Stick the 3 self-adhesive loop fastener tabs onto the plastic panel located at the tailgate end of the boot side and in line with the 3 hook fastener patches welded onto the reverse side of the boot liner. (as indicated by the white arrows in **image H**) Repeat on opposite side.
-  Attach the 400mm long self adhesive loop fastener strips onto the plastic either side of the tailgate lock (**image I**)
-  Stick the 1 self-adhesive loop fastener tab onto the plastic panel behind the tailgate lock in line with the hook fastener patch welded onto the reverse side of the boot liner. (See Orange arrow in **image I**)
- Attach the hook fastener welded onto the underside of the boot liner base to this loop fastener.




# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The **Tailored** Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (image 1)
- The Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 2)

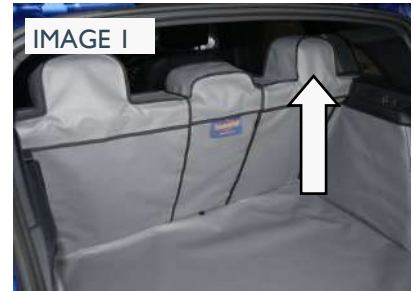


## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 3)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5C. BUMPER FLAP

-  Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- (image 4)





## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER (*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*)

### STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit”

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

