

VOLKSWAGEN GOLF SV - 2014 on

RAISED + LOWERED FLOOR / RECLINED + UPRIGHT SEATS

Our ref: H0634

PACKAGING REQUIREMENTS.

BOOTLINER

- **2x 890 mm** 30mm wide self-adhesive loop fastener
- **200 mm** 30mm wide self-adhesive loop fastener
- **90 mm** 30mm wide self-adhesive loop fastener
- **120 mm** 30mm wide self-adhesive loop fastener
- **6x tabs** self-adhesive loop fastener

TAILGATE COVER

- **24 x tabs** self-adhesive loop fastener



Split bootliner with lowered floor and reclined seats



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive fasteners to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any Fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The Hook & Loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.




Please note not all of the photographs are specific to your vehicle

STEP 1. PREPERATIONS

- Remove the load cover. It may be replaced later.
- Set the floor level to fit the specification of your order.
- Set the seat incline to the specification of your order:

Upright - set the seats to a position as indicated by **image A** (140mm gap between side panel and seat back)

Reclined - set the seats to a fully reclined position (**image B**)

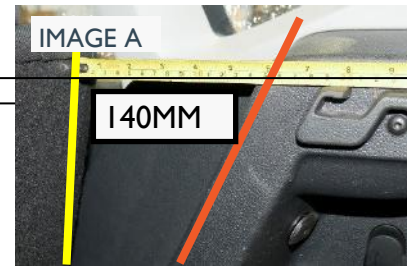

STEP 2. FITTING BASE

- Place the bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fastener welded to the reverse face fix directly to the carpet. (**image C**)



STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fastener between the side panels and seat panel. (**image D**)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (**image E**). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.








REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers.

STEP 4. FITTING THE SIDES + BACK

- Attach the **3 self-adhesive loop fastener tabs** to the plastic side panels on both sides of the boot in line with the hook fastener welded onto the rear of the bootliner's side panels (**image F**).
- Attach the 200mm (nearside) and 120+90mm (offside) self-adhesive loop fastener strips to the plastic side panels just above the carpeted area and fasten the bootliner to it using the hook fastener welded / sewn onto it. (**image G - nearside**) (**image H - offside**)
- Attach the 890mm long self-adhesive loop fastener strips along the tailgate edge of the boot starting from the lock in the middle going along the ridged plastic panel and up along the sides (**image I**). Snip the loop fastener in the corners to ease around the bend. fasten the bootliner to it using the hook fastener welded onto it.

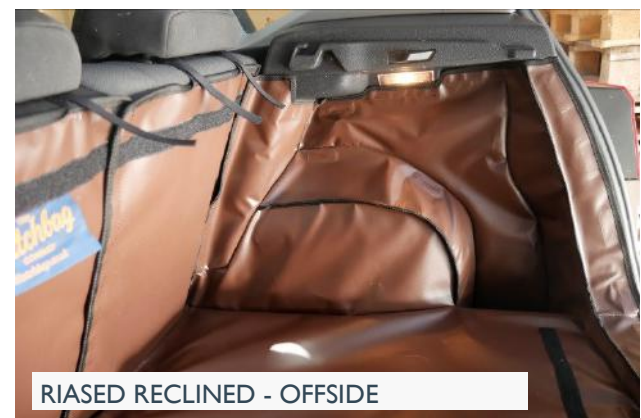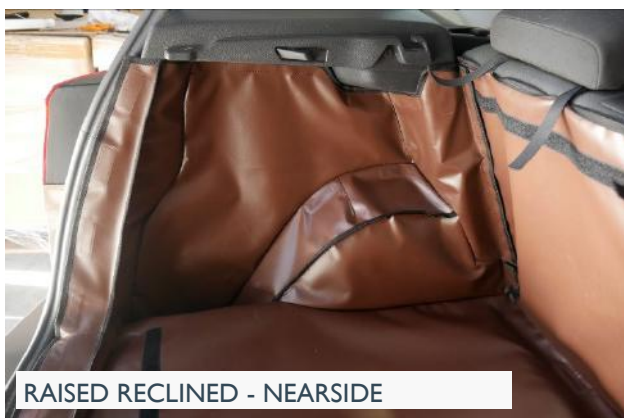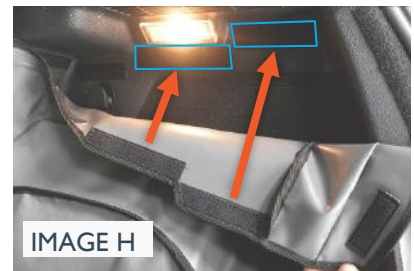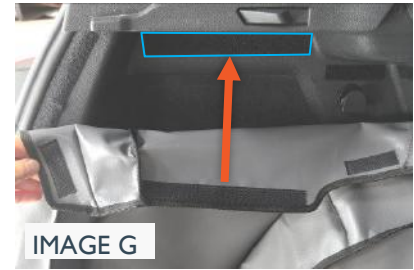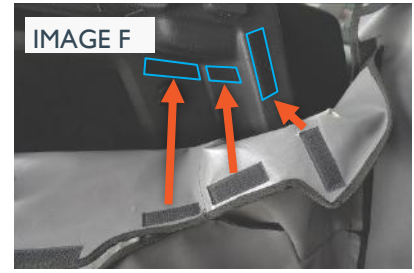

OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive hook fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the hook fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound

OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER (*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*)

