

## RENAULT KADJAR - 2015 on

Our ref: H0635- FIN/FNO

### PACKAGING REQUIREMENTS.

#### BOOT LINER

**FIN**

- **2 x 330mm of 30mm wide self-adhesive loop fastener**
- **31x REF:113**
- **4x tabs self-adhesive loop fastener**

**FNO**

- **2 x 370mm of 30mm wide self-adhesive loop fastener**
- **23x REF:113**

**TAILGATE COVER**

- **20 x tabs self-adhesive loop fastener**

REF:113



Image above is the FIN Rear Split version prepared for a Bumper flap (not in the standard place)



Image above is the FNO Rear Plus version



### VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive loop fastener to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any loop fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The hook & loop fastener cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

**NOTE:** the adhesive takes 24hrs to reach full adhesion – do not touch during.



## STEP 1. PREPERATIONS

- Please remove the load cover, it may be replaced once the boot liner has been fitted.

## STEP 2. FITTING BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image A)



## STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - Fasten the hook & loop fastener between the side panel and the seat panel. (image B)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts (image C). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up.
- Push the upper corners behind the plastic moulding. (image D).



### REAR PLUS VERSIONS

You MUST unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. (Please refer to REAR PLUS options on website to see 'detailed photo')

## STEP 4. FITTING THE SIDES

- Place the side panels in position, pushing the boot liner pockets into the recesses. (Image E)
- The hook fastener welded onto the reverse face of the boot liner will attach directly to the boot carpet.
- Additional option: see **Step 6E**.



## STEP 5. FITTING BACK





### FIN

- Attach the two 330mm loop fastener strips onto the plastic edge adjacent to the chrome panel on both sides of the tailgate lock. Start at the arrows. (Image F).
- Attach the 2 self-adhesive loop fastener tabs onto the plastic : Align with the hook fastener welded to the reverse face of the liner (Image G). Repeat on the opposite side.



### FNO

- Attach the two 370mm loop fastener strips onto the plastic edge adjacent to the chrome panel on both sides of the tailgate lock. Start at the arrows. (Image H).

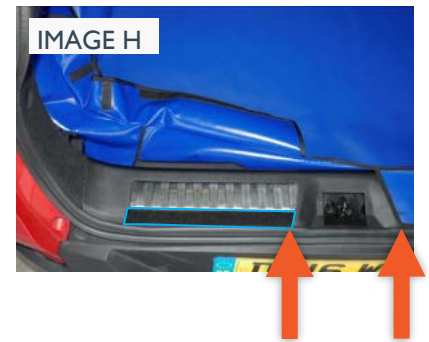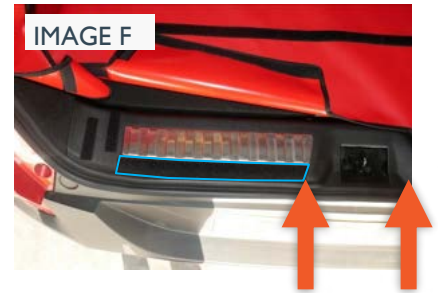

FIN - NEARSIDE



FIN - OFFSIDE



FNO - NEARSIDE




FNO - OFFSIDE

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 6A. SEAT FLAP

- The Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 1 + 2)

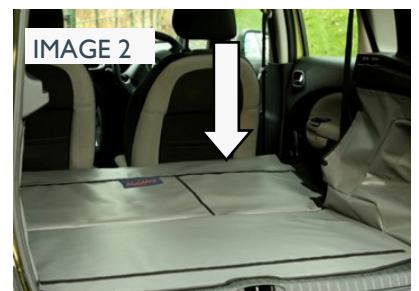

## STEP 6B. TAILGATE COVER




Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 3)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 6C. BUMPER FLAP (image 4)

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

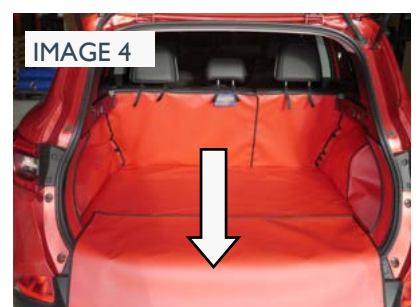

## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 6D. FLOOR EXTENSION

The “Floor extension” offers protection to the rear seats when purchased in conjunction with a REAR PLUS / SPLIT option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



### STEP 6E. FREQUENT USE KIT ( REF:113)

#### APPLICATION

- Attach the hook side of the ‘frequent use hook & loop fastener patch’ to the carpet surface of your boot, then attach the boot liner to the newly attached patch,
- Once the frequent use hook & loop fastener patch has been installed, make sure when removing the boot liner that the frequent use hook & loop fastener patch stays attached to the carpet as to not damage it.
- The frequent use hook & loop fastener patch allows the boot liner to be inserted and removed frequently, without the hook fastener on the boot liner fluffing up the boot carpet.

