

SEAT LEON ST - 2014 - 2020

RAISED & LOWERED FLOOR

OUR REF: H0639-FRSD/FLOW

PACKAGING REQUIREMENTS.

BOOTLINER - FRSD

- **2x 360 mm** 30mm wide self-adhesive loop fastener
- **8x ref:113** frequent use fastener tabs
- **2x tabs** self-adhesive loop fastener



LEFT - Raised Floor - Split Bootliner
RIGHT - Lowered Floor - Ski Flap Bootliner

BOOTLINER - FLOW

- **2x 360 mm** 30mm wide self-adhesive loop fastener
- **14x ref:113** frequent use fastener tabs
- **2x tabs** self-adhesive loop fastener



REF:113

TAILGATE COVER

- **26 x tabs** self-adhesive loop



VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook to attach the cover to the plastic trim it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is **highly likely there will be a build-up of silicone**. Before applying any self-adhesive fastener pads, the surface **MUST be thoroughly** cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly **any residue with a separate clean dry cloth**.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not touch during.




Please note not all of the photographs are specific to your version.

STEP 1. PREPERATIONS

- Remove the load cover. It may be replaced later.
- Set the floor level to fit the specification of your order.

STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. **(image A)**
- **Lowered Floor Only** - Use the frequent use fastener patches between the hook fasteners welded onto the underside of the boot liner and the carpeted floor to fix more securely. **(image B)**

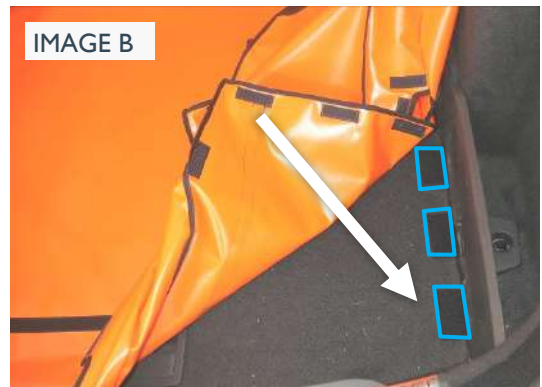

STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. **(image C)**
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. **(image D)**. Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)

STEP 4. FITTING THE SIDES & BACK

- Push the boot liner pockets into the recess and down into the boot pockets.
- On the nearside, stick 2 self-adhesive fastener tabs onto the plastic base on the bottom of the pocket in line with the fasteners welded onto the bottom of the boot liner pocket. (image E)
- Fasten the hook fasteners sewn and welded onto the top edge of the boot liner sides directly onto the carpet along the top edge of the carpeted boot sides. (image F)
- Stick the 30mm wide loop fastener strip onto the metal panel located on both sides of the lock at the tailgate end of the boot. Fasten the boot liner to it using the hook fasteners welded onto it. (highlighted in yellow - image G)
- Attach the back sides directly to the carpeted using the 4 frequent use fastener patches between the fasteners on the boot liner and the boot wall. (highlighted in green - image H)



Raised Boot Offside



Lowered Boot Offside

OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



STEP 5B. TAILGATE COVER



Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER (*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*)

STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your Boot Liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit”

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

