

LAND ROVER - DISCOVERY 5 - 2017 on (inc 2021 facelift)

7 SEATS - AIRCON / RECESS - WITH/WITHOUT LAND ROVER DOG GUARD

OUR REF: H0640-SE7-AIR/RCS-DG/DGNO

(2nd row seats are slid as far back to the tailgate & 3rd row folded & not useable)

PACKAGING REQUIREMENTS.

- BOOTLINER**
 - 2 x 550 mm 50mm wide self-adhesive loop fastener
 - 2 x 2450mm 30mm wide self-adhesive loop fastener
 - 2 x tabs self-adhesive loop fastener tabs
 - 6 x ref: 121

- SILL FLAPS**
 - 10 x tabs self-adhesive loop fastener



- TAILGATE COVER** REF:121
 - 20 x tabs self-adhesive loop fastener



Rear Split boot liner with additional Sill flaps & 3rd row seat belt covers; prepared for Bumper & Seat flaps



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the fasteners and let them fully adhere over the next 24 hours for the best bond.



**The fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



Take care when fitting the Bootliner that you do not accidentally move or recline the rear seats by pressing the electric seat controls. If you can switch off the controls in the boot we would advise it.

VEHICLES NOT FITTED WITH LAND ROVER DOG GUARD

(please note not all the photographs are specific to your vehicle)



LAND ROVER DOG GUARD FITTED - SKIP TO NEXT PAGE

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Ensure the 3rd row seats are flat
- Slide the 2nd row seats forward to access the 3rd row seat headrests.



STEP 2. FITTING THE BASE

- Place the Bootliner into the car boot with the Hatchbag logo at the seat end. **(image A)**
- Wrap the two elastic loops over the 2nd Row headrests. **(Image B)**



STEP 3. FITTING THE BACK

- Raise the tailgate plate to an upright position and slide the boot liner pocket over the top edge. **(Image C)**
- Lower the tailgate plate.



STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fastener between the side panels and the seat panel. (image D)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts (image E). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.

VERY IMPORTANT

You MUST unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. (Please refer to REAR PLUS / SPLIT options on website to see detailed photo)



CONTINUE TO PAGE 6 “ALL VERSIONS”



VEHICLES FITTED WITH LAND ROVER DOG GUARD

Please note not all of the photographs are specific to your vehicle

STEP 1A. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Ensure the 3rd row seats are flat
- Slide the 2nd row seats forward to access the 3rd row seat headrests.



STEP 2A. FITTING THE BASE

- Place the Bootliner into the car boot with the Hatchbag logo at the seat end. **(image F)**
- Wrap the two elastic loops over the 2nd Row headrests. **(Image G)**
- Feed the front panel under the dog guard, and around the floor brackets. If you have a Rear Split option you will have to pull hard to feed the split seams through. **(image H & I)**



STEP 3A. FITTING THE BACK

- Raise the tailgate plate to an upright position and slide the Bootliner pocket over the top edge. **(Image J)**
- Lower the power tailgate plate.




STEP 4A. FITTING THE FRONT

- Feed the hook fastener section of the sides panels past the dog guard down strut. **(Image K)**
- Fasten the hook fastener to the loop fasteners on the front panel. **(image L- this is not specific to your model)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(image M)**. Do not over tighten so as to pull the base of the boot liner off the floor. Repeat the procedure with the left and right headrests.

PLEASE NOTE

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

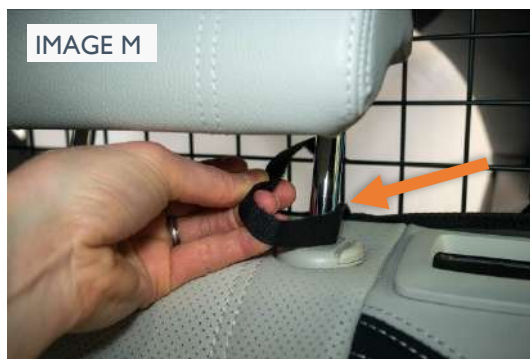

ALL VERSIONS

STEP 5. FITTING THE SIDES

- Pull the nearside 3rd row seat belt down and into the middle of the car whilst fastening the corresponding hook & loop fastener closure behind it. (image N)






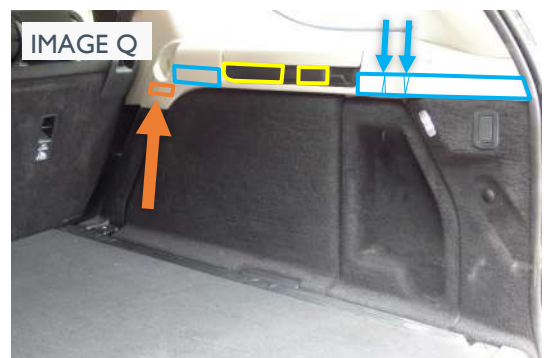
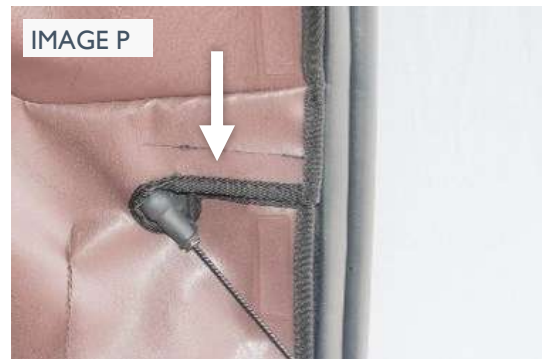
PTG - POWER TAILGATE VERSION ONLY

- At the tailgate end: feed the loop fastener section of the fastener closure behind the “tailgate plate support cable” (image O)
- Fasten the hook & loop fastener closure above the cable. (image P)



ALL VERSIONS

-  Attach the 50mm wide self-adhesive loop fastener to the bottom edge of the side plastic panels just above the carpeted area. You will need cut to length and also snip the fastener strip to allow it to sit flat on the plastic : (See blue arrows & highlights in Image Q)
-  Attach the 30mm wide self-adhesive loop fastener to the plastic below the storage pocket. Trim to leave the hook and push button exposed. (See yellow highlights in Image Q)
-  Attach a single loop fastener tab to just under the load cover mounting recess (see Orange arrow in Image Q)
- Fasten the hook fastener sewn onto the top edge of the boot liner to the previously attached fastener.



STEP 5 CONT. FITTING THE SIDES


- Insert 3 x ref:121 fastener tabs on each side of the tailgate end of the boot. To do this peel back the rubber and slot the plastic end of the fastener tabs behind the boots carpeted panel. (Image R)
- Slide these fastener tabs up or down so that they align with the hook fasteners welded onto the rear sides of the boot liner. (Image S)
- Repeat on opposite side.



STEP 5. CONTINUED

ADDITIONAL WINDOW SILL FLAP OPTION

- Unfasten the top edge of the boot liner side and attach the narrow section of the sill flap to the fastener previously attached. Align the slots to the slots in the boot liner side (See blue arrows Image T)
- Locate where the hook fastener is welded onto the reverse face of the sill flap : align and attach 5 small loop fastener tabs onto the plastic window sill. Now fasten the flap to this fastener. (Highlighted in green - Image U)
- Re-attach the boot liner side-panel to the sill flap and exposed fastener. (highlighted in orange - Image V)
- Repeat on opposite side.

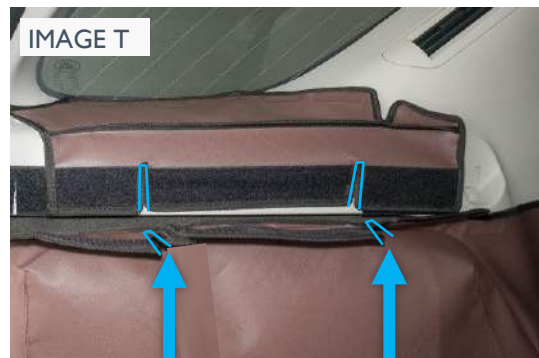

OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A.

TAILORED SEAT + STANDARD SEAT FLAP

- The Tailored Seat Flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (image 1)
- The Standard Seat Flap is designed to be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 2)
- Lower the 2nd row seats.
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 3)
- The Standard Seat flap covers the top edge of the folded 2nd row seats. (image 2)



STEP 5B. TAILGATE COVER

- Remove the mini load cover.
- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- The three slots allow the replacement of the mini load cover.



STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS / SPLIT.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



*The Seat Flaps 5A, The Bumper Flap 5C
& The Floor Extension 5D cannot be
added at a late date*