

LEXUS RX - 2016 to 2022

OUR REF: H0645

PACKAGING REQUIREMENTS.

BOOTLINER

- **2x 250 mm** 20mm wide self-adhesive loop fastener
- **16x tabs** self-adhesive loop fastener
- 35 x REF:113



REF:113

TAILGATE COVER

- **9 x tabs** self-adhesive loop fastener
- 8 x REF:113



Rear split liner with seat flap and bumper flap prep.



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a **separate** clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if it doesn't stick)
3. Attach the fasteners and let them fully adhere over the next 24 hours for the best bond.



**The fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Please recline your rear seat
- Remove dog guard / plastic tray. (image A)



REF: I 13 TABS -FREQUENT USE KIT

- If you frequently remove/fit your bootliner from/to your vehicle please note that the carpet will “fluff” up – we have included a “Frequent Use Fitting Kit”
- As you fit the bootliner, establish where the liners hook fasteners have been designed to attach to the carpet. Attach 113 tabs to the carpet first, and then the liners fastener welds will attach to these.
- **PLEASE NOTE;** To remove the liner, peel it away from the 113 tabs leaving them in situ. This will reduce the carpet from fluffing up.



STEP 2. FITTING THE BASE

- Place the bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image B)
- **“D” Ring Access.** Ensure the bound slots are positioned accurately to correspond with the fixing aperture (image C)



STEP 3. FITTING THE SIDES

- Position the very front of the side snugly into position. The hook fasteners sewn / welded to the reverse face of the liner will attach directly to the carpet. Indicated blue in photos. (image D)



Attach the 250mm long loop fastener strips to the narrow plastic section, in preparation for the front panel later. Indicated green in the photos. (image E + F)

- Position the rest of the side snugly into position. (image F)
- Repeat on opposite side.



BACK



Attach self-adhesive loop fastener tabs onto the chrome and plastic panel on either side of the tailgate lock, in line with the hookfasteners welded onto the bootliner. (image G)

- Fasten the Bootliner to these.



NON-HYBRID VEHICLES ONLY

Attach the two small separate covers directly to the carpet left exposed. (image H)

PLEASE NOTE



Hybrid vehicles have vents here : Do NOT cover them.




STEP 4. FITTING THE FRONT

- Upright the rear seats.
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image I). Make sure to hold the front part of the base in position so as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.
- Fasten the two outer wings to the fasteners you attached in step 3 (image E + J).

PLEASE NOTE

You MUST unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers in future.

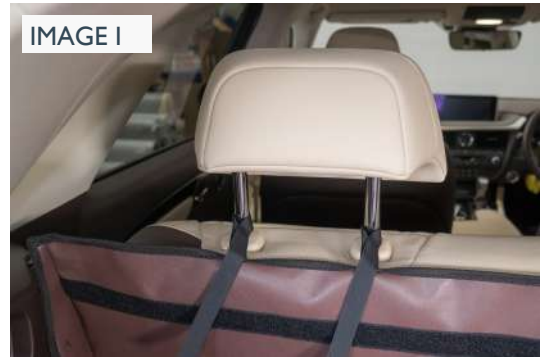

STEP 5. DOG GUARD

- Replace your dog guard if applicable.

PLEASE NOTE

- We do not advise you to use our bootliner in conjunction with a Boot tray it can drag the sides of the Bootliner.



OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

The Seat Flap 6B, The Bumper Flap 6C & The Floor Extension 6D cannot be added at a late date

STEP 6A. TAILGATE COVER (image 1)

- Line up the tailgate cover with the tailgate and clean only the areas where the self-adhesive fastener tabs will be stuck to the plastic.
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- The remaining fasteners will attach directly to the carpet.



STEP 6B. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 4)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the bootliner just below the top of the rear seats. (image 2)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 3)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

STEP 6C. BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the bootliner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

STEP 6D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a **REAR PLUS** option. (image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm.
- It will offer no protection to the rear doors

