

## FORD ECOSPORT - 2014 - 2018 (not Facelift)

OUR REF: H0648

### PACKAGING REQUIREMENTS.

#### BOOTLINER

- 21 x tabs self-adhesive loop fastener
- 11 x REF 113 ( frequent use tabs)
- 3 x REF 125 ( cut @ 150mm long)

#### TAILGATE COVER

- 22 x tabs self-adhesive loop fastener



Split Bootliner prepared for an additional bumper flap



REF:113



REF:125



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fasteners sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

#### To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the fasteners and let them fully adhere over the next 24 hours for the best bond.



*\*The fasteners cannot be used once it has been in contact with silicone. Replacement kits are available*

## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING THE BASE

- Recline the rears seats
- Place the Bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The loop fasteners welded to the reverse face fix directly to the carpet. Start from the tailgate end working towards the seats. (image A)



## STEP 3. FITTING THE SIDES

- Fasten the hook fasteners welded onto the reverse face of the Bootliner sides directly onto the carpeted boot sides. See orange highlights (image B)
- Attach the self-adhesive loop fastener tabs to the side plastic panels in line with the hook fastener welded on the reverse face of the liner. See green highlights (Image B + C)
- Repeat on opposite side. (Image D)



## STEP 4. FITTING THE BACK

- Attach the 3 x Ref: 125 clips.

Peel back the rubber seal, and slide the folded section of the clip onto the exposed edge of the plastic plate. (Image E)

Slide into position so that it aligns with the hook fastener sewn to the reverse face of the liner.

(Image F + G)

Fasten the back panel to the loop fastener.

(Image H)



Attach the a self adhesive loop fastener tab to the plastic in-line with the hook fastener weld on the reverse face of the liner. See orange arrow (Image H)

- Repeat on opposite side



IMAGE E



IMAGE F



IMAGE G




IMAGE H



## STEP 5. FITTING THE FRONT

- Return your rear seats to the upright position and set them to the desired rake. (image I).
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image J). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.
- The loop fasteners welded to the reverse face of the front panel will attach directly to the carpet on the back of the seats.

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to REAR PLUS / SPLIT options on website to see detailed photo)

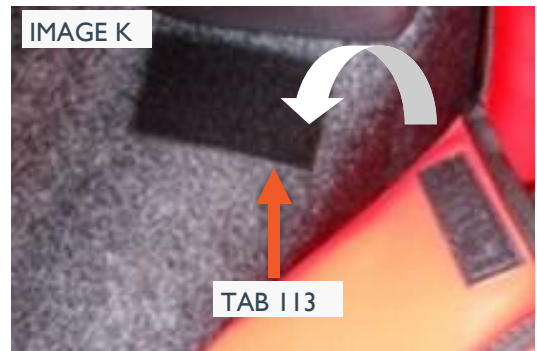

### REF: 113 TABS -FREQUENT USE FASTENERS

- If you frequently recline your rear seats or alter the rake setting please note that the carpet will “fluff” up on the rear face. We have included a pack of “Frequent use tabs”
- As you fit the front panel, establish where the liner fastener has been designed to attach to the carpet. Attach 113 tabs to the carpet first, and then the liner fasteners will attach to these. (image K).
- PLEASE NOTE; To alter the seat position, unfasten the headrest straps and then peel the cover away from the 113 tabs leaving them in situ. This will reduce the carpet from fluffing up.

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 6A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Bootliner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

## STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

## STEP 6C. BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the bootliner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 6D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.( image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm
- It will offer no protection to the rear doors

*The Seat Flap 6A, The Bumper Flap 6C & The Floor Extension 6D cannot be added at a late date*

### STEP 6E. FREQUENT USE KIT

- If you frequently remove/fit your Bootliner from/to your vehicle please note that the carpet will “fluff” up – you can purchase an additional “Frequent Use Fitting Kit”  
(image 7+8)

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

