

## MERCEDES E CLASS - 2016 on (inc 2021 facelift)

5 SEATER

OUR REF: H0653

### PACKAGING REQUIREMENTS.

#### BOOTLINER

- **2x 670 mm** 30mm wide self-adhesive loop fastener
- **2x 180 mm** 30mm wide self-adhesive loop fastener
- **2x 470 mm** 30mm wide self-adhesive loop fastener
- **6x ref.121** cut at 75mm



Split bootliner with Bumper Flap and Seat Flap prep.

#### TAILGATE COVER

- **24 x tabs** self-adhesive loop fastener



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

#### To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the fasteners and let them fully adhere over the next 24 hours for the best bond.






*\*The fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING BASE

- Fold the rear seats flat prior to placing the bootliner into the boot.
- Place the bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. *(image A)*
- Push the foam tabs sewn onto the front end of the base into the slot between the floor and the rear seats. Fold the seats back up trapping the foam tabs. *(Image B)*
- Stick the 470mm long self-adhesive loop fastener strips onto the ridged chrome panel located on both sides of the tailgate end of the boot. Attach the hook fastener welded onto the underside of the bootliner base to this fastener. *(Image C)*

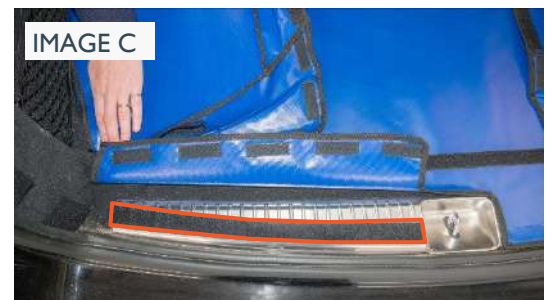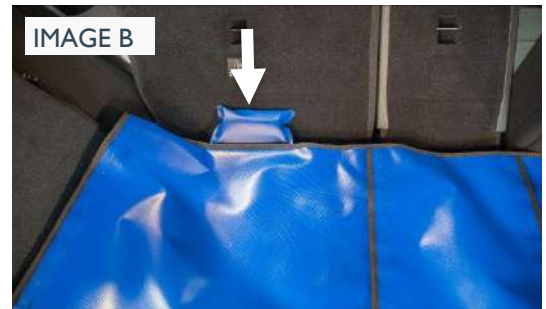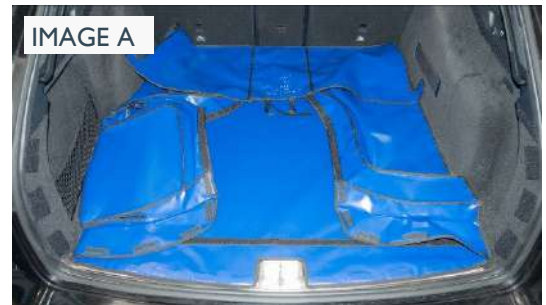

## STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fastener between the side panels and the front panel. *(image D)* You may wish to re-align this once the bootliner has been fitted for a better fit.
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. *(image E)*. Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.



### REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

## STEP 4. FITTING THE SIDES

- Attach the 670mm long self-adhesive loop fastener strips to the bottom edge of the side plastic panels just above the carpeted area as **highlighted in blue**. Snip at corners to ease around the bend and at the rear end of the fastener at an angle to make it fit. (Image F)
- Attach the 180mm long self-adhesive loop fastener strips to the area **highlighted in green**. Snip the rear end of the fastener at an angle to make it fit. (Image F)
- Place the nearside pocket behind the net so it fits snugly (Image H)
- Fasten the hook fastener sewn onto the top edge of the bootliner to the previously attached fastener. Start at as indicated by the **orange arrow** (image H) for easiest alignment.
- Insert 3 ref:121 fastener tabs (**yellow**) on each side of the tailgate end of the boot. To do this peel back the rubber and slot the plastic end of the fastener tabs behind the boots carpeted panel. (Image H, image of a different car)
- Slide these fastener tabs up or down so that they align with the hook fasteners welded onto the rear sides of the bootliner. (Image H & I)



# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Bootliner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

## STEP 5C. BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the bootliner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.( image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*