



Our ref: H0654-CU

#### Question 1 - Floor identification

**FNO-FRSD** AVAILABLE 
No false floor - Raised





- Has a shallow floor
- No hinge visible at bottom of seats
- No plastic panels in **BOTH** recesses


#### FNO-FLOW-PKT1

AVAILABLE 🕢



No false floor-Low-1 Pocket



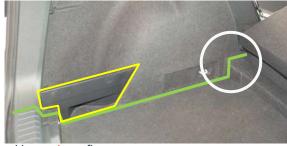

- Has a deep floor
- Hinge between seats
- With left side plastic panel in recess

## **FNO-FLOW-PKTNO**

AVAILABLE 🕢



No false floor-Low-No Pocket

Without left side plastic panel in recess









Our ref: H0654-CU

## Question 1 - Floor identification - Continued

#### FIN-FRSD

AVAILABLE (

## With false floor -Raised

Floor is adjustable—set in



highest position

- Flat base
- Floor panel has handle (blue highlight)
- Has removable plastic panels in BOTH recesses (yellow)

#### FIN-FLOW

AVAILABLE (



## With false floor -Lowered

Floor is adjustable—set in low-



est position

- Floor panel has handle (blue)
- Plastic mounts visible on each side (white highlights)
- Angled base (orange highlight)
- Has removable plastic panels in BOTH recesses (vellow)



PLASTIC PANEL GUIDE



17/11/2022 | v. 01 Page. 2





Our ref: H0654-CU

#### Plastic Panels

The boot liner is designed to expose the plastic panel and accommodating the removal\*. This allows the following:

\*this is only applicable to the variations that have plastic panels or plastic panel mounts.

- The plastic panels can be removed to create a wider load area.
- 2. Allowing the boot liner to fit, if the plastic panels have been lost.
- 3. Allowing the boot liner to fit, if your version does not have a plastic panel option

#### Please Note:

If the plastic panel has been removed, an area of the boot will be exposed through the gap in the boot liner. (orange highlight)







**NEXT PAGE** 








Our ref: H0654-CU

#### Question 2 - Vehicle Identification Guide













17/11/2022 | v. 01 Page. 4