

Seat Ateca – 2016 on

Our ref: H0654-SE

Question 1 – Floor identification

FNO-FRSD

AVAILABLE 

No false floor - Raised





- Has a **shallow** floor
- No hinge visible at bottom of seats
- No plastic panels in **BOTH** recesses

FNO-FLOW-PKT1

AVAILABLE 

No false floor-Low-1 Pocket

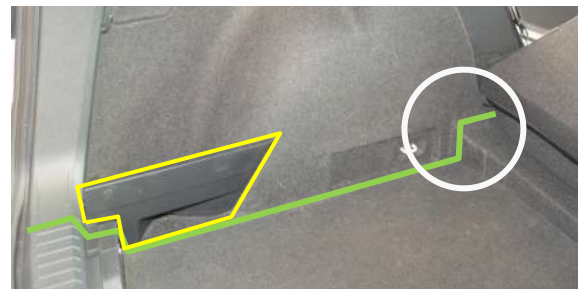

- Has a **deep** floor
- Hinge between seats
- With **left side** plastic panel in recess
- 

FNO-FLOW-PKTNO

AVAILABLE 

No false floor-Low-No Pocket

- Without **left side** plastic panel in recess



NEXT PAGE – 2 MORE FLOOR VERSIONS



Seat Ateca - 2016 on

Our ref: H0654-SE

Question 1 - Floor identification - Continued

FIN-FRSD

AVAILABLE 

With false floor -
Raised

- Floor is **adjustable**—set in



highest position

- Flat base
- Floor panel has handle (blue highlight)
- Has removable plastic panels in **BOTH** recesses (yellow)

FIN-FLOW

AVAILABLE 

With false floor -
Lowered

- Floor is **adjustable**—set in low-



est position

- Floor panel has handle (blue)
- Plastic mounts visible on each side (white highlights)
- Angled base (orange highlight)
- Has removable plastic panels in **BOTH** recesses (yellow)



PLASTIC PANEL GUIDE



Seat Ateca - 2016 on

Our ref: H0654-SE

Plastic Panels

The boot liner is designed to expose the plastic panel and accommodating the removal*. This allows the following:

**this is only applicable to the variations that have plastic panels or plastic panel mounts.*

1. The plastic panels can be removed to create a wider load area.
2. Allowing the boot liner to fit, if the plastic panels have been lost.
3. Allowing the boot liner to fit, if your version does not have a plastic panel option

Please Note:

If the plastic panel has been removed, an area of the boot will be exposed through the gap in the boot liner. (orange highlight)

