

VOLKSWAGEN TOURAN - 2015 on

OUR REF: H0655

PACKAGING REQUIREMENTS.

BOOT LINER

- **2x 190 mm** 30mm wide self-adhesive loop fasteners
- **2x 400 mm** 30mm wide self-adhesive loop fasteners
- **2x 660 mm** 30mm wide self-adhesive loop fasteners



Standard boot liner with seat flap and bumper flap prep

TAILGATE COVER

- **26 x tabs** self-adhesive loop fasteners



VERY IMPORTANT PREPARATION



To ensure the self-adhesive sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:



1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 loop fasteners tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the hook & loop fasteners and let them fully adhere over the next 24 hours for the best bond.




**The hook & loop fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*


STEP 1. PREPARATIONS

- Fold the 3rd row seats flat, they will not be usable with the boot liner installed.
- Set the 2nd row seats to be most upright. (Image A)
- Move the 2nd row bench as far back to the tailgate as possible. (Image A)
- Remove the loadcover cassette, you can re-insert it once the boot liner has been fitted.
- Remove the two plastic panels (should your model have them) and store elsewhere.

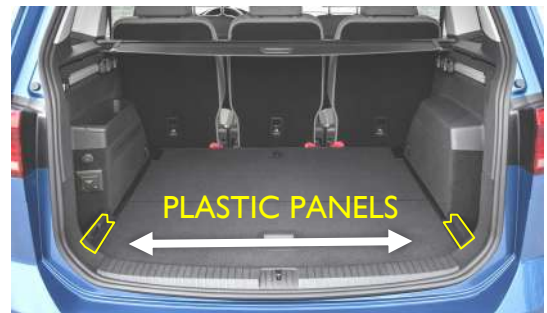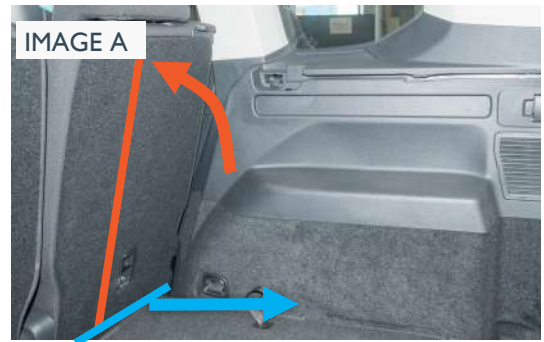

STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet.
-  Stick the 400mm long self-adhesive loop fastener onto the ridged panel located on both sides of the lock at the tailgate end of the boot. Fasten the boot liner to it using the hook fasteners welded onto it. (Image B)

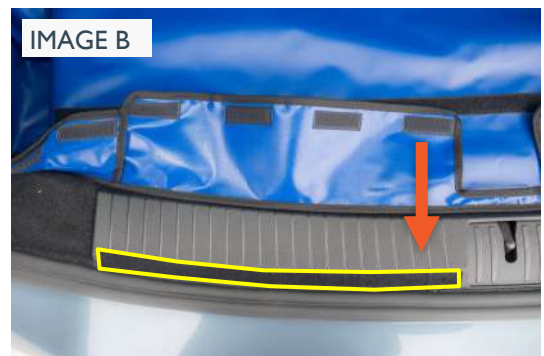

STEP 3. FITTING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (image C)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image D). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo)



STEP 4. FITTING THE SIDES

- Attach the 660mm long self-adhesive loop fasteners along the sides as highlighted in yellow (Image E & F)
- Attach the 190mm long self-adhesive loop fasteners up the rear end of the sides above the carpeted surface as highlighted in orange. Start from the carpet going upwards (Image E)
- Fasten the hook fasteners sewn and welded onto the edge of the boot liner to the previously attached loop fasteners.



OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



STEP 5B. TAILGATE COVER



Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date