

## TOYOTA C-HR - 2017 on

OUR REF: H0658

### PACKAGING REQUIREMENTS.

#### BOOTLINER

- **2x 650 mm** 30mm wide self-adhesive loop fastener
- **1x tabs** self-adhesive loop fastener
- **12x** ref.113 (frequent use fasteners)

#### TAILGATE COVER

- **29 x tabs** self-adhesive loop fasteners

REF:113



Low floor version -  
Plus boot liner with seat flap and bumper flap prep



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

#### To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the fasteners and let them fully adhere over the next 24 hours for the best bond.



*\*The fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. **(image A)**



## STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. **(image B)**
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. **(image C)**. Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.



### REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

## STEP 4. FITTING THE SIDES & BACK

- Attach 6 ref.133 tabs onto both carpeted side panels. (image D) These tabs improve the connection between the boot liner and the boot walls.
- Fasten the hook fasteners sewn onto the top edge of the boot liner sides directly onto the previously attached tabs and the carpet along the top edge of the carpeted boot sides where applicable. (image D)

\*When removing the bootliner, please leave the ref.133 tabs attached to the boot to reduce the amount the boot carpet fluffs up.




- Stick the long self-adhesive fastener strips onto the plastic panels located on both sides of the tailgate lock starting from the middle going along the panel and up along the sides. (image E). Snip the fastener strips in the corners to ease around the bend.

- Fasten the boot liner to the previously attached fasteners using the hook fastener welded onto the liner. Start by aligning the middle (image F) and hold it in place whilst attaching the ends to ensure the liner has the best fit.



- Stick 1 self-adhesive loop fastener tab on the center inside of the back panel in line with the hook fasteners welded onto the back panel of the boot liner. (orange arrow - Image F)

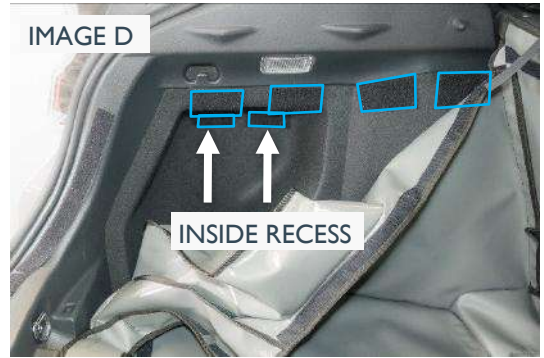

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Bootliner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

## STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.( image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*

### STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your Bootliner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit” (image 7+8)

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

