

## HYUNDAI TUCSON 2016 to 2021

Our ref: Ho660

### PACKAGING REQUIREMENTS.

#### BOOTLINER

- 4x tabs self-adhesive loop fastener
- 2 x 250mm x 30mm wide self-adhesive loop fastener
- 2 x 280mm x 30mm wide self-adhesive loop fastener
- 2 x 900mm x 30mm wide self-adhesive loop fastener



*Photo shows a Rear Plus option prepared for Seat Flap and Bumper Flap*

#### TAILGATE COVER

- 20 x tabs self-adhesive loop fastener



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fasteners sticks to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

#### To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary)
3. Attach the fasteners and let them fully adhere over the next 24 hours for the best bond.




*\*The fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- The rear seat uppers must be set to the rake as shown in image A.

*To set: recline the rear seat uppers until they are in line with the load cover locating recesses (image A)*

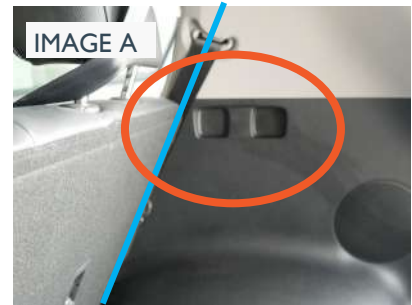

## STEP 2. FITTING BASE

- Place the bootliner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. Work from the tailgate end, forward. (image B) The hook fasteners welded to the reverse face of the base panel will attach directly to the carpet.



## STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panel and the seat panel. (image C)
- Loop the hook & loop fastener straps around the corresponding headrest posts. (image D). Make sure to hold the front part of the base in position as not to pull the Bootliner too far up.



### REAR PLUS VERSIONS

You MUST unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. (Please refer to REAR PLUS options on website to see detailed photo)

## STEP 4. FITTING THE SIDES



Align the front end of boot liner sides to the boot sides. Attach the 280mm & 250mm lengths of 30mm wide self adhesive fastener strips to the nearside in line with the fastener sewn onto the boot liner as highlighted in blue. See image E.



*You will need to make one cut in this strip so that it follows the curved profile; see image F.*



Attach the 900mm length of 30mm wide fastener along the tailgate edge of the boot starting from the lock in the middle going along the plastic and up along the sides see image G + H

- Ensure you press the fastener into each ridge to ensure maximum adhesion
- Snip the fastener strips in the corners to ease around the bend. Fasten the bootliner to it using the hook fastener welded onto it.
- Repeat for the opposite side



# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive fastener tabs will be stuck. (image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

## STEP 5C. BUMPER FLAP

- Fit Boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap is one standard length for all models. Trim the length to suit your requirements. Ensure you do not cut through the stitching
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.( image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



*The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date*