

Jeep Renegade – 2015 on

Shape 3 – False Floor Removed & False Floor Raised

our ref: H0668-SH3-FOUT / SH3-FRSD

PACKAGING REQUIREMENTS.

BOOTLINER

- **2x 170 mm** 30mm wide self-adhesive loop fastener
- **2x 210 mm** 30mm wide self-adhesive loop fastener
- **2x 270 mm** 30mm wide self-adhesive loop fastener
- **2x 440 mm** 30mm wide self-adhesive loop fastener
- **8x tabs** self-adhesive loop fastener



FOUT VERSION – Rear Plus with seat split & ski flap boot liner prepped for a seat flap

TAILGATE COVER

- **22 x tabs** self-adhesive loop fastener



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.



FOUT VERSION (False Floor Removed)

Remove the variable false floor, and store it, it cannot be used with this boot liner.


FRSD VERSION (False Floor Raised)

Raise the variable false floor to the highest level.



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The loop fasteners welded to the reverse face fix directly to the carpet. (image A)

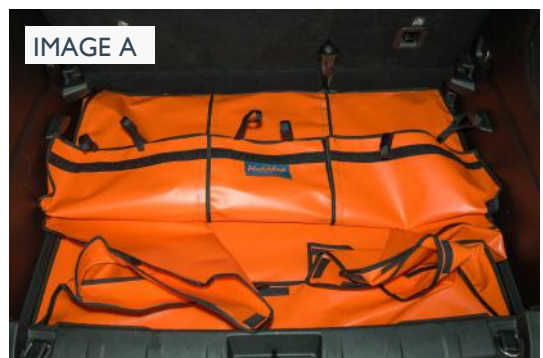

STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (image B)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image C). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo)

FITTING THE BACK



Stick the 270mm long self-adhesive loop fastener strip (blue) onto the plastic panel between the tailgate lock and the D-Ring slot (image D)



Attach the 440mm long self-adhesive loop fastener strip (pink) along the tailgate edge of the boot starting from the D-Ring slot going up along the sides until in line with the top of the speaker (image E). Snip the self-adhesive fastener strips in the corners to ease around the bend. Repeat on opposite side.



FOOT VERSION (False Floor Removed)



Attach 1 self-adhesive loop fastener tab to the center behind the tailgate lock and in line with the hook fastener weld on the boot liner. Green arrow. (image D).

- Fasten the boot liner to the previously attached fasteners using the hook fastener welded / sewn onto the reverse side of the Bootliner.

FITTING THE SIDES





On offside attach self adhesive loop fastener tabs (highlighted in yellow - image F) to the plastic side panels in line with the hook fastener welds on the boot liner sides. Some fasteners will be on the top rim of the speaker.



For the nearside you need to attach the 210 mm long self adhesive loop fastener (highlighted in blue - image G), the 170 mm long self adhesive loop fastener (highlighted in red - image G) and two self adhesive loop fastener tabs (highlighted in yellow - image G)

- Fasten the boot liner to the previously attached tabs using the hook fastener welds on the boot liner side edges.

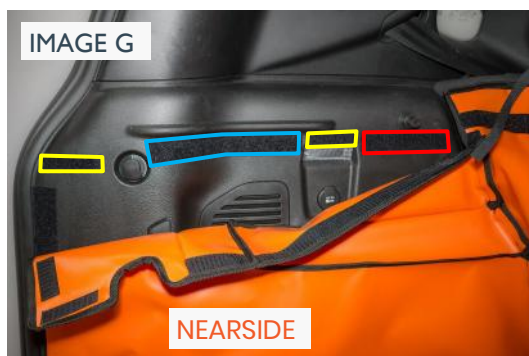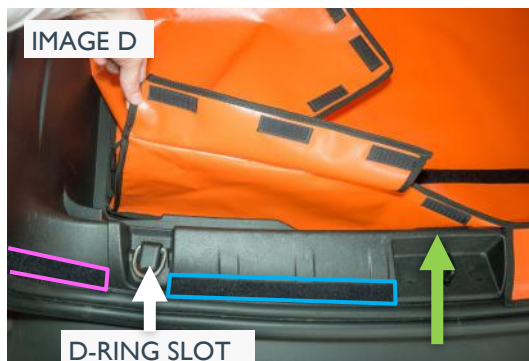

OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP (+TAILORED)

- The **Tailored** Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (image 1)
- The Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 2)




STEP 5B. TAILGATE COVER



Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 3)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

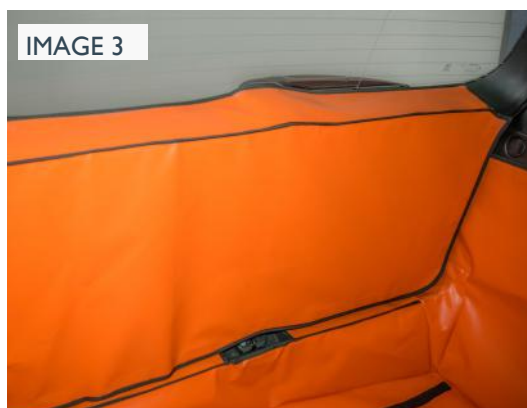

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the bootliner. (image 4)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 5)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date