

Honda CR-V - 2018 Onwards

Non-Hybrid

Our ref: H0672-HYNO

Packaging requirements:

BOOT LINER

- **2 x 930mm** 30mm wide self-adhesive loop fastener
- **2 x 600mm** 30mm wide self-adhesive loop fastener
- **7 x tabs** self-adhesive loop fastener

TAILGATE COVER

- **20 x tabs** self-adhesive loop fastener



Left photo: FLOW VERSION - Rear plus, prepared for seat flap, bumper flap & boot liner extension. (Front D-ring access optional extra)

Right photo: FRSD -TRI VERSION - Rear plus, prepared for a bumper flap (Speaker mesh optional extra)



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Put the headrests in their highest position.
- Remove the warning triangle if you have one, and leave both straps unfastened.



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image B)



STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panels and the seat panel. (image C)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts (image D). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.



REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. ('Please refer to REAR PLUS / SPLIT options on website to see detailed photo')

STEP 4. FITTING THE SIDES




Stick the 930mm (highlighted blue) and the 600mm (highlighted yellow) self-adhesive loop fasteners onto the plastic side and tailgate plate (image E & F)

- Attach 3 self adhesive tabs (highlighted orange - image E) in line with the loop fastener tab on the reverse side of the Bootliner
- Repeat on the other side.

FRSD Version only (Raised)

- Stick one self adhesive tab onto the vertical face of the tailgate plate (see blue arrow - image F) in line with the loop fastener tab on the reverse side of the Bootliner

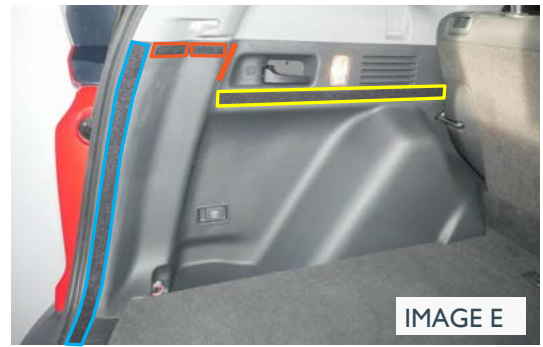

TRI Version only (Warning triangle secured)

- Carefully pass the lowest slot over the lower end of the bracket.(1 - Image G)
- Reach behind the cover and pass the ends of the lower strap through the slots.(2 - Image G)
- Carefully pass the upper slot over the upper end of the bracket.(3 - Image G)
- Reach behind the cover and pass the ends of the upper strap through the slots.(4 - Image G)
- Fit the warning triangle.



* Optional mesh

STEP 5. FITTING TO THE FASTENERS

- Fasten the boot liner to the previously attached fasteners using the hook fastener sewn and welded on the reverse side of the boot liner. (image H & I)



OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The 'Floor extension' offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 6 & 7)

- The Floor extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It will offer no full protection to the rear doors
- Attach the floor extension to the main boot liner (Image 6)
- Tie the two laces in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows—Image 7)

The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

