

PACKAGING REQUIREMENTS.

BMW 3 SERIES GT - 2013 on OUR REF: H0674

BOOT LINER

- **1x 170 mm** 30mm wide self-adhesive loop fastener
- **1x 130 mm** 30mm wide self-adhesive loop fastener
- **2x 150 mm** 20mm wide self-adhesive loop fastener
- **12x tabs** self-adhesive loop fastener
- **2x REF124** (cut at 150mm)



Boot liner with rear split and bumper flap prep

TAILGATE COVER

- **22 x tabs** self-adhesive loop fastener



REF: 124



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Set your seats to be fully reclined


STEP 2. FITTING BASE (FOAM TABS)



Raise the false floor and attach the 150mm self-adhesive loop fasteners to the plastic rails going along both sides of the boot. (highlighted blue) Attach the fastener between the 2 circular cutouts as seen in **image A**.

- Attach the 2x ref.124 hook/loop tabs to these strips (**image B**). Lower the false floor back into position so that the loop portion of the ref.124 tabs sticks through (**image C**)
- Fold the rear seats flat prior to placing the boot liner into the boot.

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (**image D**).
- Push the foam tabs sewn onto the front end of the base into the slot between the base and the rear seats. Fold the seats back up trapping the foam tabs. (**Image E**)
- Ensure the hook fastener welded onto the underside of the base (near the side recesses) attaches to the protruding loop fasteners portion of the previously installed ref.124 tabs.

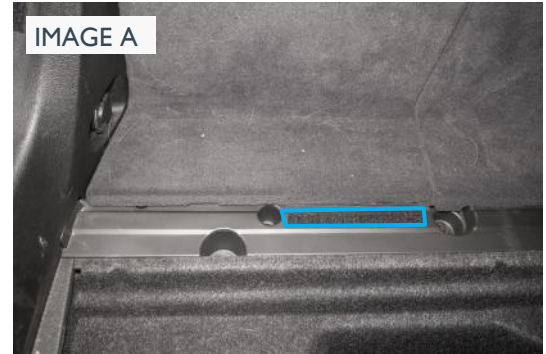

STEP 3. FITTING THE FRONT



- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (**image F**)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (**image G**). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)



STEP 4. FITTING THE SIDES

-  Attach the 170mm wide self-adhesive loop fastener strip (highlighted green) to the bottom edge of the plastic side on the nearside of the boot in line with the hook fastener sewn onto the boot liner (**image H**).
-  Repeat the last step with the 130mm long fastener on the offside (highlighted yellow, **image I**)
- Fasten the hook fastener strips sewn onto the top edge of the boot liner to the previously attached fasteners.

NEARSIDE ONLY

- Open up the panel inside the nearside recess. (**image J**)
- Loop the elastic straps sewn onto the boot liners' reverse side (highlighted in pink) over the panel as shown in **image K** and push the panel back into its position.




OFFSIDE ONLY

- Locate the 2 hook fastener straps attached to the top of the boot liner by the offside recess.
- Loop these around the vent grill above and fasten to the hook fasteners welded onto the boot liner just below each strap. **(image L)**



BACK OF BOOT

-  Attach the self-adhesive loop fastener tabs (highlighted in red) to the plastic panel at the tailgate opening of the boot. Align each tab with the corresponding hook fastener welded to the reverse face of the boot liner. **(image M)**
- Attach the boot liner to these fastener tabs



OPTIONAL EXTRAS


Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



STEP 5B. TAILGATE COVER

-  Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date