

VOLVO XC60 - 2017 on
OUR REF: H0681-NETNO / NET

PACKAGING
REQUIREMENTS.

BOOT LINER

- **2x 440 mm** 30mm wide self-adhesive loop fastener

TAILGATE COVER

- **24 x tabs** self-adhesive loop fastener



NETNO
Rear seat split version prepared for a bumper flap & seat flap



NET
Rear seat split & Ski flap version prepared for a bumper flap & seat flap & Bootliner Extension



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

Please note not all of the photographs are specific to your floor version

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. **(image A)**



STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. **(image B)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(image C)**. Make sure to hold the front part of the base in position as not to pull the boot liner too far up.
- Outer headrests - Loop the elastic fastener straps around both headrest posts. **(image D)**. Make sure to hold the front part of the base in position as not to pull the boot liner too far up.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

STEP 4. FITTING THE SIDES & BACK



NETNO VERSION

- Push the nearside of the boot liner into the pocket on the nearside of the boot. *The pocket will be a little narrower.* (Next: go to step 4a)



NO VERSION

- Unclip the net from the two retaining clips. (image F)
- Push the boot liner into the pocket on the nearside of the boot, the hook fastener protrusion will sit under the net. (image G)
- At the tailgate end, push the loop fastener protrusion behind the net and fasten to the hook fastener sewn onto the bootliner. (image H)
- Clip the net back into the two retaining clips

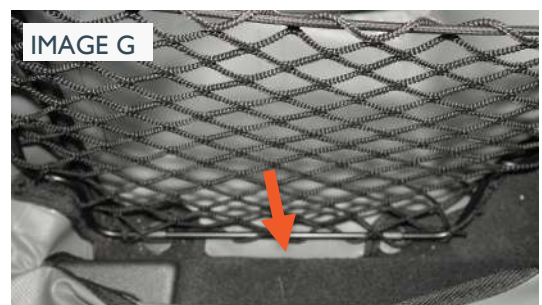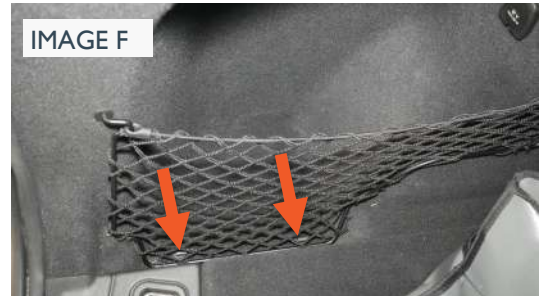

STEP 4a.

- Fasten the hook fastener welded / sewn onto the top edge of the boot liner sides directly onto the carpet along the top edge of the carpeted boot sides. (image E & F)
- Stick the 440mm long self-adhesive loop fastener strip onto the chrome & plastic panel located on both sides of the lock at the tailgate end of the boot. Align to the outer edge. Fasten the boot liner to it using the hook fastener welded onto it. (Image G)



OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. TAILGATE COVER

- Remove the small tailgate panel first.
Pull the panels middle clips straight out (1) , then carefully pull the side pins (2) away from the side of the tailgate, one side at a time. (image 1)



Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck.

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- Replace the small tailgate panel. Start by replacing the side pins first, then middle. (image 2)



STEP 5B. TAILORED / REAR SEAT FLAPS

- The Tailored Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (image 3)
- This Seat Flap can be used in conjunction with the **all** boot liner options
- Attach the Tailored Seat Flap to the loop fastener strip that has been manufactured into the boot liner just below the top of the rear seats. (image 4)
- With the rear seats in the **folded** position the Rear Seat Flap extends the coverage forward. (image 5)
- Attach the Rear Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 4)



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 6)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flaps 5B, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit” (image 7+8)

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

