

VAUXHALL GRANDLAND X – 2017 to 2024

OUR REF: H0685

PACKAGING REQUIREMENTS.

BOOT LINER

- **2x 250mm** 30mm wide self-adhesive loop fastener
- **2x 400mm** 30mm wide self-adhesive loop fastener
- **2x 530mm** 30mm wide self-adhesive loop fastener
- **-FRSD** (Floor raised): **4x tabs** self-adhesive loop fastener.
- **-FLOW** (Low floor): **3x tabs** self-adhesive loop fastener.



FRSD (Floor raised), rear split ski, prepared for bumper flap.

FLOW (Low floor), rear split ski, prepared for seat flap.

TAILGATE COVER

- **25 x tabs** self-adhesive loop fastener



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Set the floor level to fit the specification of your order, FRSD or FLOW
- Put the headrests in its highest position.
- Set the four D-rings in flatten position.
(image A)




STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image B)
- **-FLOW VERSION ONLY-** Place one *self-adhesive loop fastener tab* in the center of the plastic piece that is in the lower part of the back of the seats (highlighted in orange - image B) in line with the hook fastener welded onto the back panel of the boot liner.



STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (image C)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (image D). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.

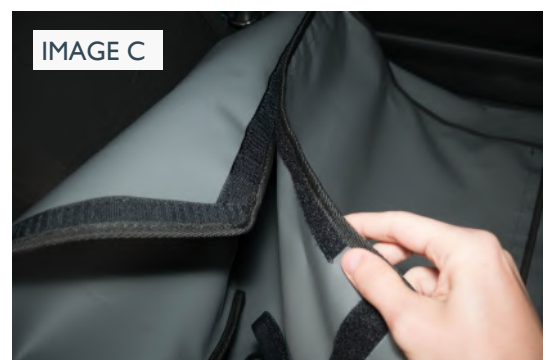

REAR PLUS VERSIONS


You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo)

STEP 4. FITTING THE SIDES

- Attach in each side one of the *530mm self-adhesive loop fastener* to the bottom edge of the side plastic panels. (highlighted in orange - image E)
- If you frequently use the rear seats release lever or the 12v plug just trim the edge of the *self adhesive loop fastener* (image F)
- Fasten the hook fastener strip sewn onto the top edge of the boot liner to the previously attached *self-adhesive loop fastener*. (image E)


REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the headrest straps before you use the rear seats release lever . (Please refer to *REAR PLUS / SPLIT* options on website to see detailed photo)

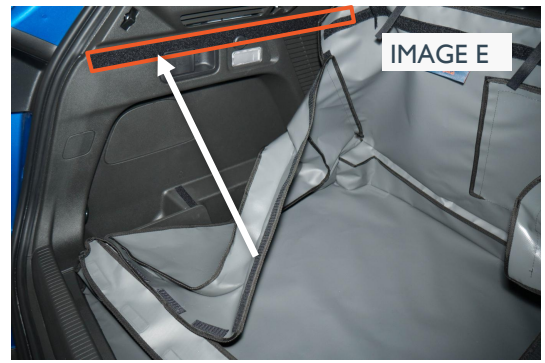


STEP 4. FITTING THE SIDE BACK

- Stick in each side one of the *250mm self-adhesive loop fastener* to the rear edge of the side plastic panels. (highlighted in blue - image G)
- Fasten the hook fastener tabs welded onto the back edge of the boot liner to the previously

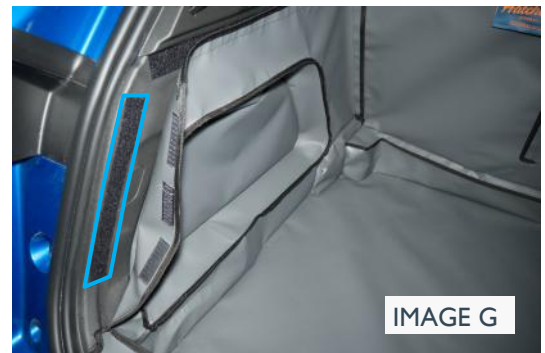

STEP 5. FITTING THE BACK

- Stick 1 self-adhesive loop fastener tab in the center on top of the back panel in line with the hook fastener welded onto the back panel of the boot liner. (white arrow -image H)
- Stick one of the *400mm self-adhesive loop fastener* onto the plastic panel located on both sides of the lock at the tailgate end of the boot (highlighted in blue -image H).
- Fasten the boot liner to it using the hook fastener welded onto it (highlighted in orange -image H)

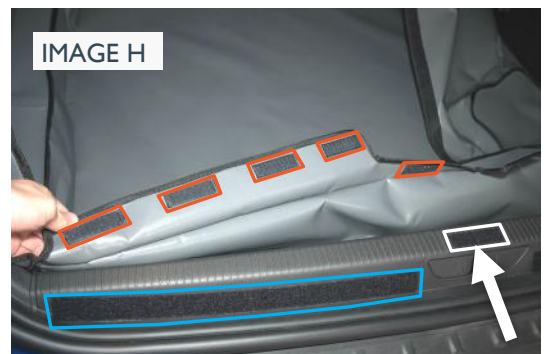

OPTIONAL EXTRAS


Please note the following photos are non-specific to your vehicle


STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



STEP 5B. TAILGATE COVER

-  Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

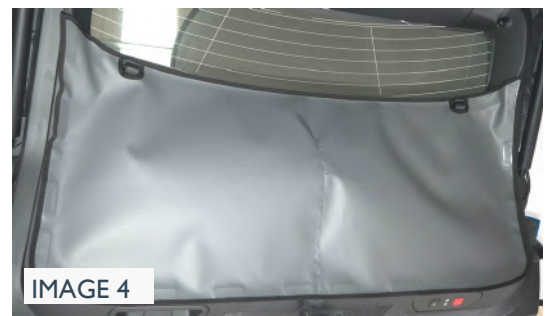

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit” (image 7+8)

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

