

RANGE ROVER VELAR - 2017 on

OUR REF: H0692

PACKAGING REQUIREMENTS.

BOOT LINER

- **2x 380 mm** 30mm wide self-adhesive loop fastener

TAILGATE COVER

- **20x tabs** self-adhesive loop fastener



No Net & Dog Guard version - Rear Split option



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

VEHICLES NOT FITTED WITH RANGE ROVER DOG GUARD


Please note not all of the photographs are specific to your vehicle

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. **(image A)**
- Stick the 380mm long self-adhesive loop fastener strip onto the plastic panel located on both sides of the lock at the tailgate end of the boot. Fasten the boot liner to it using the hook fastener welded onto it. **(Image B)**

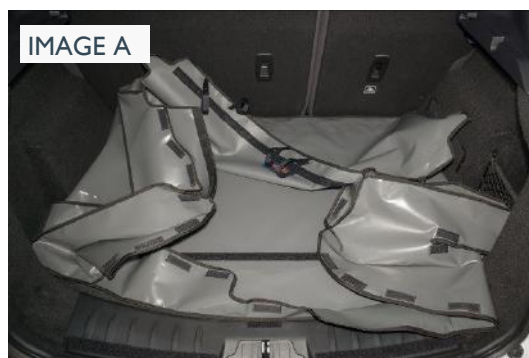

STEP 3. FITTING THE FRONT

- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. **(image C)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(image D)**. Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

STEP 4. FITTING THE SIDES

- Fasten the hook fastener sewn & welded onto the top edge of the boot liner sides directly onto the carpet along the top edge of the carpeted boot sides. (image E & F)
- Its best to start at the back end (orange arrow, image E & F) and work your way forward.




VEHICLES FITTED WITH RANGE ROVER DOG GUARD

Please note not all of the photographs are specific to your vehicle

STEP 1A . FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. (image G)
- Fold the rear seats and feed the front panel under the dog guard, and around the floor brackets. If you have a Rear Split option you will have to pull hard to feed the split seams through. (image H & I)

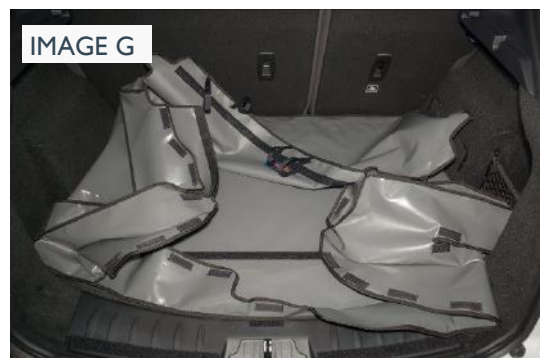

STEP 1A. FITTING THE BASE continued

- Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet.
- Stick the 380mm long self-adhesive loop fastener strip onto the plastic panel located on both sides of the lock at the tailgate end of the boot. Fasten the boot liner to it using the hook fastener welded onto it. (Image J)




STEP 2A. FITTING THE FRONT

- Feed the hook fastener section of the sides past the dog guard down strut (Image K)
- Fasten the hook fastener to the loop fasteners on the front panel. (image L)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (image M). Do not over tighten so as to pull the base of the boot liner off the floor. Repeat the procedure with the left and right headrests.

PLEASE NOTE

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)

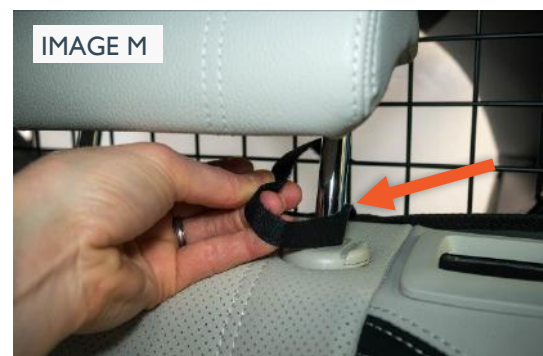

FINAL STEP - refer to previous **STEP 4. FITTING THE SIDES** to complete your boot liner fitting

OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

STEP 5B. TAILGATE COVER



- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit” (image 7+8)

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

