

## Tesla Model X- 2015 on

our ref: H0694

### Packaging requirements:

#### BOOT LINER

- 2 x 330mm 50mm wide, self-adhesive loop fastener
- 2 x 880mm 30mm wide, s-a. loop fastener
- 2 x 440mm 30mm wide, s-a. loop fastener
- 2 x 120mm 30mm wide, s-a. loop fastener
- 2 x 340mm 30mm wide, s-a. loop fastener
- 2 x Frequent use tabs (ref.113)
- 2 x tabs self-adhesive loop fastener



Rear split, prepared for seat flap and bumper flap

#### TAILGATE COVER

- 17 x tabs self-adhesive loop fastener
- 1 x 490mm 30mm wide s-a. loop fastener



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



## STEP 1. FITTING THE BASE

### 6 & 7 SEATER ONLY

- Loop the elastic straps sewn to the boot liner base around the head rests of the folded 3rd row seats. (image A)



### ALL MODELS

- Attach the two frequent use tabs on both back corners of the floor. (highlighted in blue - image B)



REF: 113



- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image C)



## STEP 2. FITTING THE FRONT

- Fasten the straps around headrests. (image D). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat on the other two headrest.

You MUST unfasten the headrest straps before you recline the rear seat uppers. ('Please refer to REAR PLUS / SPLIT options on website to see detailed photo')



### STEP 3. FITTING THE SIDES






Attach the loop fastener strips to both sides plastic panels as showed on **images E & F** (Near side) following the color code on first page packaging requirements.



Stick the two self-adhesive loop fastener tabs on near side plastic panel (**highlighted in yellow image E & image F**) in line with the hook fastener tabs welded on the reverse side of the boot liner near side.

- Snip the self-adhesive fastener strips in the corners to ease around the bend. (**highlighted in white and pink—images E & G**)
- Fasten the hook fastener sewn and welded on the reverse side of the boot liner to the previously attached fasteners. (**image H**)

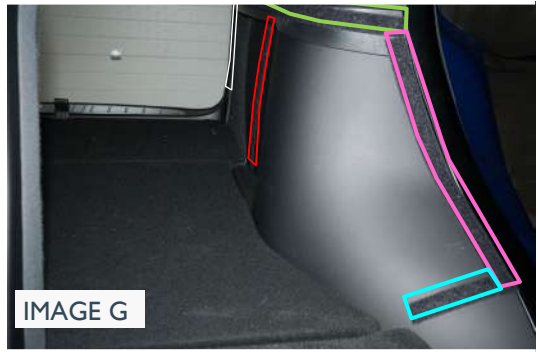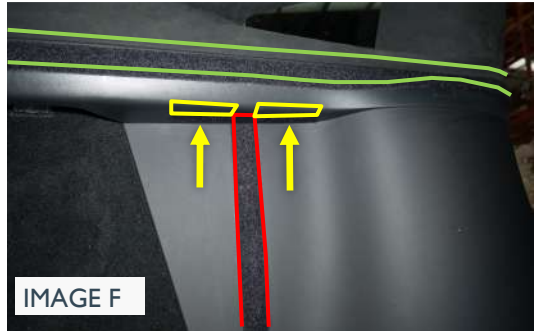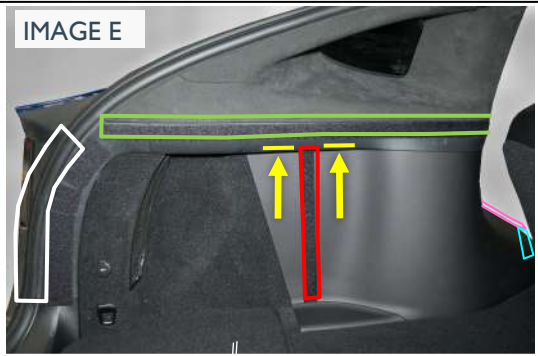

### STEP 4. ACCES TO UNDERFLOOR STORAGE

- Unfasten the top hook-loop fastener as shown on **image I**
- Pull the handle up (**image J**)



## OPTIONAL EXTRAS

*Please note not all of the photographs are specific to your vehicle*

### STEP 6A. SEAT FLAP & TAILORED SEAT FLAP

*Only available for 5 & 7 seater.*

- The **Tailored** Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (Image 1)
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip on the Boot liner just below the top of the rear seats. (Image 2)
- The **Rectangular** Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position this flap extends the coverage over the exposed section of the seat backs and the headrests. (Image 3)




### STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

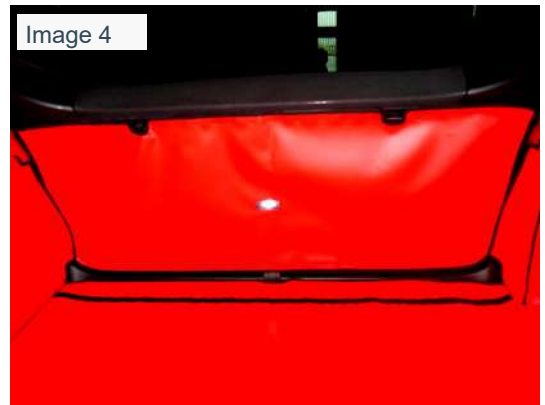

### STEP 6C. BUMPER FLAP

- Install the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



# OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

## STEP 5D. FLOOR EXTENSION

The 'Floor extension' offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 6 & 7)

- The Floor extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It will offer no full protection to the rear doors
- Attach the floor extension to the main boot liner (Image 6)
- Tie the two ties in the corner together (White arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrow - Image 7)
- Fasten the hook fastener tab under the bootliner side to the loop fastener previously attached (Green arrow—Image 7)



**The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date**

## STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will "fluff" up – we have an alternative "Frequent Use Fitting Kit" (image 8+9)

The Frequent Use Kit is available to buy from our "on-line" Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.