

KIA PICANTO - 2017 on (inc 2020 facelift)

RAISED FLOOR & FALSE FLOOR REMOVED

OUR REF: H0695-FRSD & FOUT

PACKAGING REQUIREMENTS.

BOOT LINER

- **2x 560 mm** 30mm wide self-adhesive loop fastener
- **4x 150 mm** 30mm wide self-adhesive loop fastener
- **3x tabs** self-adhesive loop fastener

TAILGATE COVER

- **16 x tabs** self-adhesive loop fastener



Raised floor version with rear plus



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



Please note not all of the photographs are specific to your model

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Please set the boot floor level to match your order

FOOT –False floor removed versions ONLY

Please remove the floor and store it. The floor will not be able to be used with the boot liner in place.

STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. **(image A)**



STEP 3. FITTING THE FRONT



- **- PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. **(image B)**
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. **(image C)**. Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.




REAR PLUS VERSIONS


You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. *(Please refer to REAR PLUS / SPLIT options on website to see detailed photo)*

STEP 4. FITTING THE SIDES & BACK

- 
 Attach 2x 150mm self-adhesive loop fasteners (blue) and a self adhesive tab (yellow) to each side panel in line with the hook fastener sewn and welded onto the boot liner sides. (Image D) These sit just below the feint crease in the plastic side.
- Push the circular protruding plastic hooks on each side through the holes cut into the boot liner. (Image E) Fasten the hook fastener strip sewn onto the top edge of the boot liner to the previously attached loop fasteners.
- 
 Attach the 560mm self-adhesive loop fasteners (green) along the tailgate edge of the boot starting from the lock in the middle going along the plastic panel and up along the sides (image F).
- Snip the self-adhesive fastener strips in the corners to ease around the bend. Fasten the boot liner to it using the hook fastener welded onto it.

FOUT –False floor removed versions ONLY

- 
 Stick 1 self-adhesive fastener tab on the center inside of the back panel in line with the hook fastener welded onto the back panel of the boot liner. (arrow - Image F)

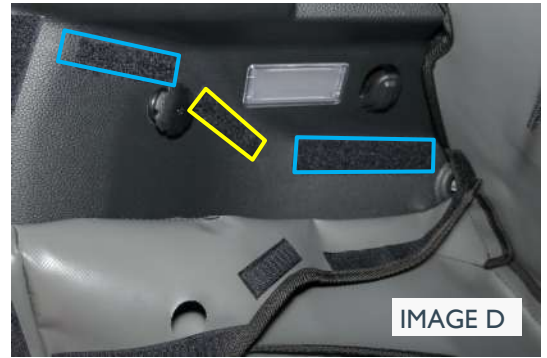

FLOOR RAISED—NEAR SIDE



FLOOR RAISED—OFF SIDE



FALSE FLOOR REMOVED—NEAR SIDE



FALSE FLOOR REMOVED—OFFSIDE


OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
-  Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

