

JEEP CHEROKEE - 2014 on

OUR REF: H0700

PACKAGING REQUIREMENTS.

☐ BOOT LINER

- **1x 680 mm** 30mm wide self-adhesive loop fastener
- **1x 505 mm** 30mm wide self-adhesive loop fastener
- **1x 450 mm** 30mm wide self-adhesive loop fastener
- **19x tabs** self-adhesive loop fastener



Split boot liner prepared for an additional seat-flap and bumper-flap

☐ TAILGATE COVER

- **22 x tabs** self-adhesive loop



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Remove the nearside metal divider. (image A)
It may be replaced later
- Slide the 2nd row seat bench as far back towards the tailgate as possible.
- This boot liner will accommodate any seat rake position once fitted



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image B)



STEP 3. FITTING THE BASE


- Fold the 2nd row seats forward to allow easier access for the next steps.
- Stick 9 self-adhesive fastener tabs on each side at the tailgate end of the boot in line with the hook fastener tabs welded onto the boot liner. (Image C & D)



STEP 4. FITTING THE SIDES

NEARSIDE

- Attach the 450mm long self-adhesive fastener (highlighted blue) along the arch on the nearside of the boot, in line with the fastener sewn onto the boot liner. (image E)
- Attach the 505mm long self-adhesive fastener (highlighted yellow) along the bottom edge of the crease in the nearside panel. Snip the fastener strip to ease it around the bends. (image F)
- Attach 1 self adhesive fastener tab (highlighted green) behind the bracket mount shown in image G.

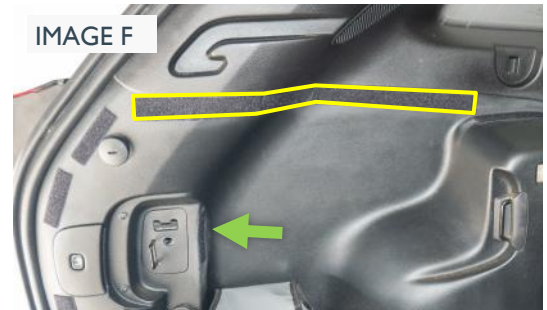

OFFSIDE

- Attach the 680mm long self-adhesive fastener (highlighted blue) along the arch on the offside of the boot, in line with the fastener sewn onto the boot liner. (image H)
- Attach the liner to all the previously attached fasteners. (image I & J) Start from the rear lining up the hook through the hole and work your way to the front. (orange arrows)
- You can now replace the Metal luggage divider bar (see gallery next page)



STEP 4. FITTING THE FRONT

- Raise the Seats back into an upright position. Chose your desired seat rake.
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (image K). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.



OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP (+TAILORED)

- The **Tailored** Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. **(image 1)**
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats.
- The additional Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests. **(image 2)**



STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. **(image 3)**
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. **(image 4)**
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date