

## VOLVO V90 - 2016 on

OUR REF: H0706

### PACKAGING REQUIREMENTS.

#### ☐ BOOTLINER

- **2x 590 mm** 30mm wide self-adhesive loop fastener
- **2x 430 mm** 30mm wide self-adhesive loop fastener
- **6x ref.121** cut at 75mm

#### ☐ TAILGATE COVER

- **23 x tabs** self-adhesive loop fastener



Rear split, prepared for bumper flap and seat flap.



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

#### To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



*\*The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.

## STEP 2. FITTING BASE

- Fold the rear seats flat prior to placing the boot liner into the boot.
- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image A)
- Push the two foam tabs sewn onto the front end of the base into the slot between the floor and the rear seats. Fold the seats back up trapping the foam tabs. (Image B)



## STEP 3. FITTING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fastener between the side panels and the front panel. (image C) You may wish to re-align this once the boot liner has been fitted for a better fit.
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image D). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests. (image E).




### REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fastener + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)

## STEP 4. FITTING THE SIDES

- Attach the 590mm long self-adhesive loop fastener strips to the bottom edge of the side plastic panels just above the carpeted area as **highlighted in blue**. Snip at the rear end of the fastener at an angle to make it fit. (Image F)
- Fasten the hook fastener sewn onto the top edge of the boot liner to the previously attached fastener. (Image F)
- Insert 3 ref:121 fastener tabs (**highlighted in yellow—images G,H & I**) on each side of the tailgate end of the boot. To do this peel back the rubber and slot the plastic end of the fastener tabs behind the boots carpeted panel. (Image G)
- Slide these fastener tabs up or down so that they align with the hook fasteners welded onto the rear sides of the boot liner. (Image H)
- Fasten the hook fastener welded onto the rear of the boot liner sides to the previously attached ref:121 fastener. (Image I)

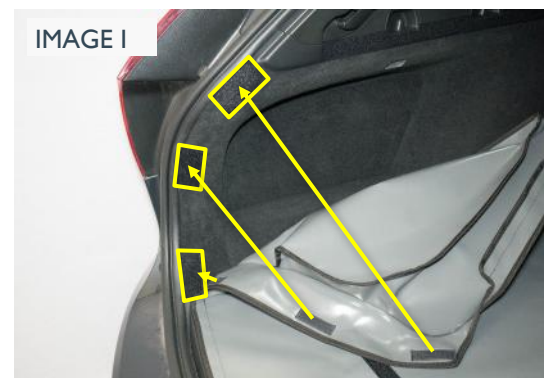

## STEP 5. FITTING THE BACK

- Stick the 430mm long self-adhesive loop fastener strips onto the ridged chrome panel located on both sides of the tailgate end of the boot. (**highlighted in orange—image J**) Attach the hook fastener welded onto the underside of the boot liner base to this fastener. (Image J)





# OPTIONAL EXTRAS


*Please note the following photos are non-specific to your vehicle*

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



## STEP 5B. TAILGATE COVER

-  Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.( image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors

