

RENAULT ZOE – 2012 ONWARDS

OUR REF: H0710

PACKAGING REQUIREMENTS.

BOOT LINER

- 11 x tabs self-adhesive loop fastener
- 3 x tabs ref.113 frequent use

TAILGATE COVER

- 24 x tabs self-adhesive loop fastener



Rear split, prepared for seat flap



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.



**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Put the headrests in their highest position. (image A)



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image B)



STEP 3. FITTING THE FRONT

- - **PLUS VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (image C)
- Fasten the hook & loop fastener straps around both headrest posts of each headrest. (orange arrows - image D & E). Make sure to hold the front part of the base in position as not to pull the boot liner too far up.
- If your car only has two headrest, you also have to attach the hook fastener sewn on the boot liner back (green arrow - Image E) directly to the carpet on the back of the seats.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo)


STEP 4. FITTING THE SIDES

- Attach the 3 ref. 113 frequent use tabs on the carpeted boot offside as shown (highlighted in blue - Image F) in line with the three hook fastener tabs sewn on the reverse of the boot liner offside
- Fasten the hook fastener sewn and welded onto the top edge of the boot liner side (highlighted in orange - image F & G) directly onto the carpet and the previously attached tabs, along the top edge of the carpeted boot side. Repeat on nearside (Image G)



STEP 5. FITTING THE BACK

- Stick five self adhesive loop fastener tabs on each side in line with the hook fasteners welded on the rear end of the boot liner. (highlighted in orange - image G)
- Attach one last self adhesive tab in line with the hook fastener welded on the rear end center of the boot liner (highlighted in green - image H)
- Fasten the boot liner to it using the hook fastener sewn on the reverse part of the boot liner.

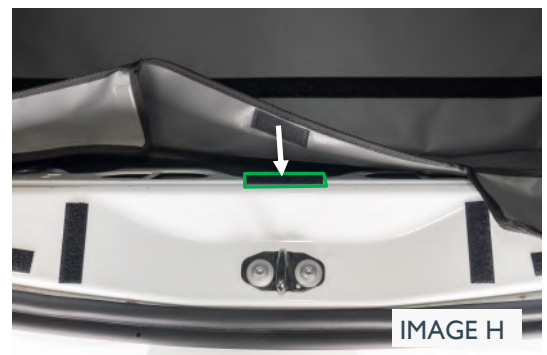

OPTIONAL EXTRAS


Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



STEP 5B. TAILGATE COVER

-  Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS page 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The “Floor extension” offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option.(image 6)

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- The max width is 148cm (see photo on left).
- It will offer no protection to the rear doors



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will “fluff” up – we have an alternative “Frequent Use Fitting Kit” (image 7+8)

The Frequent Use Kit is available to buy from our “on-line” Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

