

## Vauxhall Meriva – 2010 to 2017

our ref: H0741

### Packaging requirements:

#### BOOT LINER


- 4 x 400 mm 30mm self-adhesive loop fastener
- 1 x 450 mm 50mm self-adhesive loop fastener
- 1 x 240 mm 50mm self-adhesive loop fastener
- 1 x 110 mm 50mm self-adhesive loop fastener
- 1 x tab self-adhesive loop fastener

#### TAILGATE COVER

- 22 x tabs self-adhesive loop fastener

#### SILL FLAPS

- 2 x 190 mm 50mm self-adhesive loop fastener
- 4 x tab self-adhesive loop fastener

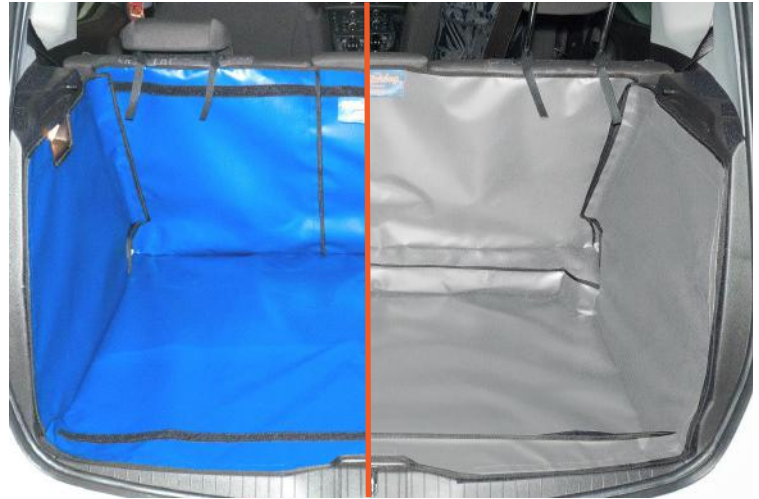

FRSD split boot liner  
prepped for a seat flap  
and bumper flap

FLOW plus boot liner  
prepped for bumper  
flap



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Put the headrests in their highest position.



## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image B)




## STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panels and the seat panel. (image C)
- Starting on the middle, fasten the hook tab welded on the reverse side of the front panel of the boot liner to the back of the central seat (orange arrow - image D). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Fasten the hook & loop fastener straps around both headrest posts of left and right headrests. (white arrows - image D).



### REAR PLUS VERSIONS

- You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. ('Please refer to REAR PLUS / SPLIT options on website to see detailed photo')

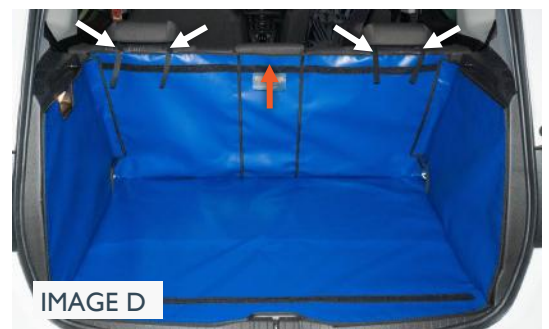

## STEP 4. FITTING THE SIDES

- Push the liner into the recess and put the d-ring through the holes provided (white arrow - image E)
- On the offside attach the 450mm loop fastener to the top edge of the side plastic panel. (highlighted in blue - Image F)
- On the nearside top, stick the 110mm loop fastener (highlighted in pink - image G) and the 240mm loop fastener (highlighted in green - image G). You can cut this fastener in two pieces as shown on image G to avoid covering the hanger (white arrow - image G)
- Attach one 400mm loop fastener strip on the back end of each plastic side panel (highlighted in orange - Image F)
- Fasten the hook fasteners strips sewn onto the reverse side of the boot liner to the previously attached fasteners.

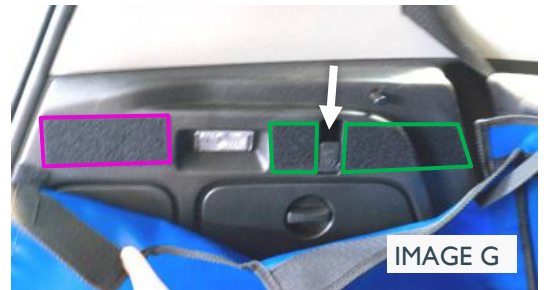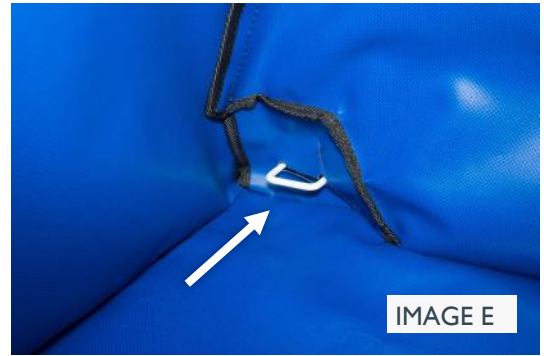

## STEP 4. B SILL FLAPS

- Attach one 190mm loop fastener strip and two self adhesive loop fastener tabs (highlighted in yellow - image I) to each sill in line with the ones on the reverse side of the sill flaps.



## STEP 5. FITTING THE BACK

- Stick the 400mm self-adhesive loop fasteners onto the ridged plastic panel located on both sides of the lock at the tailgate end of the boot (highlighted in blue - image H).
- Stick 1 self-adhesive fastener tab on the center in line with the hook fastener welded onto the reverse side of the boot liner. (highlighted in green - Image H)
- Fasten the boot liner to them using the hook fastener sewn and welded onto it.



# OPTIONAL EXTRAS


Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



## STEP 5B. TAILGATE COVER

 Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The 'Floor extension' offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 6 & 7)

- The Floor extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It will offer no full protection to the rear doors
- Attach the floor extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows - Image 7)

The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

### STEP 5E. FREQUENT USE KIT

- If you frequently remove/fit your boot liner from/to your vehicle please note that the carpet will "fluff" up – we have an alternative "Frequent Use Fitting Kit" (image 8+9)

The Frequent Use Kit is available to buy from our "on-line" Factory Shop – simply add it to your order from the Factory Shop. These can also be ordered at a later date.

