

## Skoda Rapid Spaceback - 2013 to 2019

Our ref: H0745

### PACKAGING REQUIREMENTS:

#### BOOT LINER

- 2 x 100 mm 30mm wide self-adhesive loop fastener
- 2 x 370 mm 30mm wide self-adhesive loop fastener
- 2 x 330 mm 30mm wide self-adhesive loop fastener
- 2 x 170 mm 30mm wide self-adhesive loop fastener
- 1 x 280 mm 30mm wide self-adhesive loop fastener
- 1 x 260 mm 30mm wide self-adhesive loop fastener
- 4 x tabs self-adhesive loop fastener



FNO Split boot liner, with d-ring access,prepped for seat flap & boot liner extension.

#### TAILGATE COVER

- 7 x tabs self-adhesive loop fastener



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Put the headrests in their highest position on some models there may be a central headrest.



## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners welded to the reverse face fix directly to the carpet. (image B)



## STEP 3. FITTING THE FRONT


- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (image C)
- Fasten the hook & loop fastener straps around the left and right headrests. Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Fasten the hook fastener welded on the reverse side of the boot liner directly to the top part of the carpeted back of the seats. (white arrows - image D). Accommodates versions with either two or three headrest.



### REAR PLUS VERSIONS


You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website to see detailed photo*)

## STEP 4. FITTING THE SIDES & BACK

- On both sides of the boot stick the following loop fasteners in line with the hook fasteners sewn on the reverse side of the boot liner as highlighted on **image E & F**:  


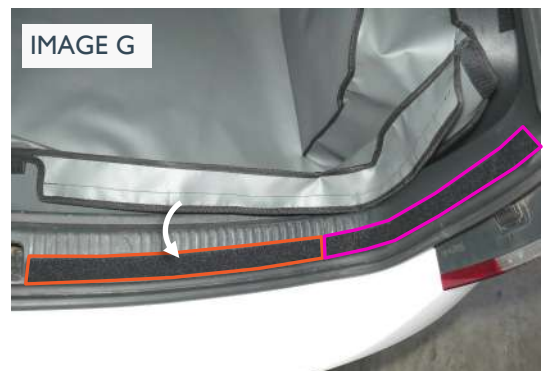
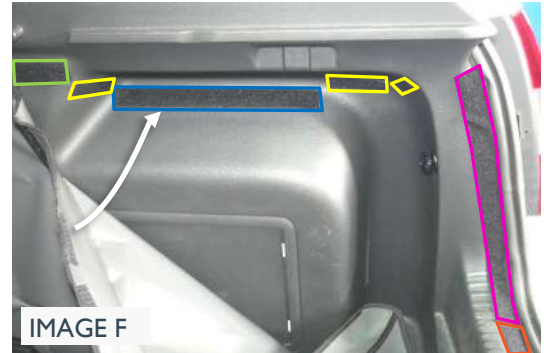
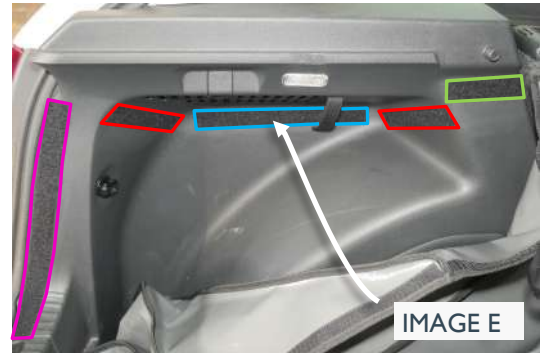
- Pink 330 mm loop fastener
- Dark blue 280 mm loop fastener
- Light blue 260 mm loop fastener
- Red 170 mm loop fastener
- Green 100 mm loop fastener
- Yellow Self adhesive loop fastener tabs

- Snip the edges of the fastener to ease around the bends if necessary.

- Stick the 2 x 370mm self-adhesive loop fastener onto the plastic panel located on both sides of the lock at the tailgate end of the boot in line with the hook fasteners sewn on the reverse side of the boot liner (**image G**) and one self adhesive tab at the center in line with the one welded on the reverse side of the liner. (**highlighted in yellow - image H**)  


- Orange 370 mm loop fastener

- Fasten the hook fastener sewn onto the top and back edge on both sides of the boot liner directly onto the previously attached loop fasteners.



## OPTIONAL EXTRAS


Please note the following photos are non-specific to your vehicle

### STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



### STEP 5B. TAILGATE COVER

-  Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



### STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS PAGE 2

Please note the following photos are non-specific to your vehicle

### STEP 5D. FLOOR EXTENSION

The 'Floor extension' offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 6 & 7)

- The Floor extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It will offer no full protection to the rear doors
- Attach the floor extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows - Image 7)

**The Seat Flap 5A, the Bumper Flap 5C & the Bootliner Extension 5D cannot be added at a late date.**

