

BMW 6 series GT - 2018 Onwards

our ref: H0777

PACKAGING REQUIREMENTS:

BOOT LINER

- **2 x 280 mm** 30mm wide self-adhesive loop fastener
- **2 x 400 mm** 30mm wide self-adhesive loop fastener
- **2 x 450 mm** 30mm wide self-adhesive loop fastener
- **2 x 40 mm** 30mm wide self-adhesive loop fastener
- **6 x tabs** self-adhesive loop fastener
- Elastic Loop A
- Elastic Loop B



TAILGATE COVER

- **18 x tabs** self-adhesive loop fastener



Split boot liner prepped for a seat flap, boot liner extension and bumper flap



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Open the offside access panel in the boot side, place the *Elastic Loop A* around the panel as shown in *image A* (highlighted in orange)
- Open the nearside access panel in the base, place the *Elastic Loop B* around the panel as shown on *Image B* (highlighted in blue) with the fastener closest to the boot side.



IMAGE A

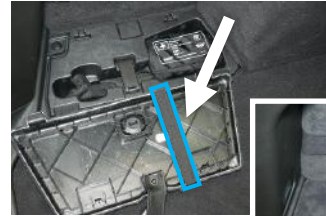


IMAGE B



STEP 2. FITTING BASE

- Fold the rear seats flat prior to placing the boot liner into the boot.
- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (*image C*)
- Push the two foam filled tabs sewn onto the front end of the base into the slot between the floor and the rear seats. Lifting the seats a little may open up the gap. Take care not to skew the base. Fold the seats back up trapping the foam tabs. (*Image D*)



IMAGE C



IMAGE D

STEP 3. FITTING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (*image E*)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (*image F*). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. (*Please refer to REAR PLUS / SPLIT options on website*)





IMAGE E



IMAGE F

STEP 4. FITTING THE SIDES

- Attach one of the *280mm loop fastener* (highlighted in green - image G) and one of the *40mm loop fastener* (highlighted in red - image G) to the side plastic panels in line with the hook fastener sewn on the reverse side of the boot liner as shown on **Image G**.
- On the under side off the plastic panel, attach *one loop fastener tab* between the light and the vent grill (highlighted in yellow - image H)
- Stick another *two loop fastener tabs* as shown on **image I** on the tailgate end of the boot side.
- Attach one of the *450mm loop fastener* at the tailgate end of the boot side (highlighted in pink - image J)
- Fasten the hook fastener strip sewn and welded on the reverse side of the boot liner to the previously attached fasteners and elastic loop A.
- Fasten the two straps sewn on the top of the boot liner sides through the plastic vent grill (**image L**)
- The boot liner side should look like **image K**.
- Repeat on the other side.

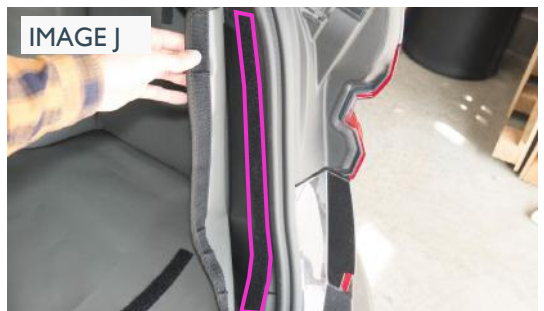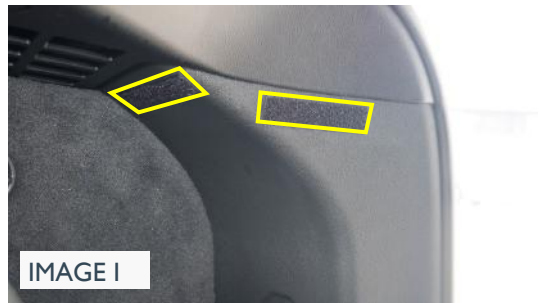

STEP 5. FITTING THE BACK

- Stick the *400mm loop fastener* onto the panel located on both sides of the lock at the tailgate end of the boot. Fasten the boot liner to them using the hook fastener sewn onto it. (highlighted in blue - image M)




OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

STEP 5B. TAILGATE COVER

-  Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS PAGE 2

Please note the following photos are non-specific to your vehicle

STEP 5D. FLOOR EXTENSION

The 'Floor extension' offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 6 & 7)

- The Floor extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It will offer no full protection to the rear doors
- Attach the floor extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows - Image 7)

The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date

