

BMW 3 Series Touring - 2019 Onwards

our ref: H0781

FITTING KIT CONTENTS :

HYNO BOOT LINER

- 2 x 410mm 50mm wide self-adhesive loop fastener
- 2 x 370 mm 20mm wide self-adhesive loop fastener
- 2 x tabs self-adhesive loop fastener
- 8 x Ref:121
- 2 x elastic loops (internal ref No - 480)

HYPLG BOOT LINER

- 2 x 480mm 50mm wide self-adhesive loop fastener
- 2 x 370 mm 20mm wide self-adhesive loop fastener
- 2 x tabs self-adhesive loop fastener
- 8 x Ref:121
- 1 x elastic loop (internal ref No - 480)


TAILGATE COVER

- 20 x tabs self-adhesive loop fastener



Left: HYN0 Rear Plus With Seat Split boot liner prepped for a bumper flap and bootliner extension

Right: HYPLG Rear Plus With Seat Split boot liner prepped for a bumper flap, rear seat Flap and bootliner extension



Elastic loop



Ref:121



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:


1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the load cover / Safety net. It may be replaced later.
- Raise the headrests. (Image A)

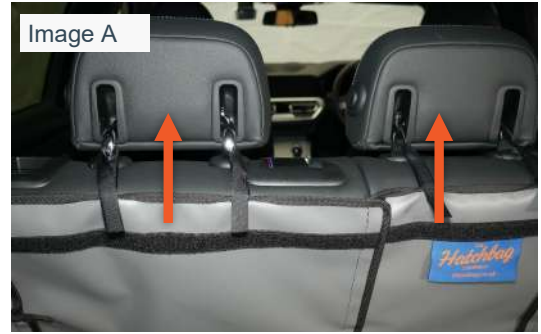

STEP 2. FITTING THE BASE

- Unlock and tilt the rear seats forward a little prior to placing the boot liner into the boot.
- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (Image B)
- Push the two foam-filled tabs sewn onto the front end of the base into the slot between the base and the rear seats. Lifting the seats a little may open up the gap. Be sure to keep the base straight. Fold the seats back up trapping the foam tabs. (Image C)



• HYNO VERSION

To reduce side shift on the base we have provided two elastic straps. The 4 hook welded tabs on the back face of the bootliner base will attach to the loop fastener section of the straps. (Image D)

- Lift the rear section of the boot floor, and pass the elastic loops over the outer ends. (Image E1) Reposition to align and fasten to the bootliner base welded tabs (Image D)



• HYPLG VERSION

Only one elastic strap has been provided. Lift the removable access panel located in the left side recess. Pass the elastic loop over the outer ends. (Image E2) Reposition to align and fasten to the bootliner base welded tabs (Image D - left side) *Note, the right side was not accessible for a second strap.*



STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image F)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image G). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT options on website to see detailed photo.**)



STEP 4. FITTING THE SIDES

- Stick the 370 mm 20mm wide self-adhesive loop fastener to the bottom edge of the plastic side panel just above the carpeted area. Trim ends to follow shape (Image H)
- Attach the hook fastener strip sewn along the top edge of the boot liner to the loop fastener fixed in place previously. (orange arrow - Image I)
- Repeat on opposite side.
- Insert 4 ref:121 fastener tabs on each side of the tailgate end of the boot. To do this, peel back the rubber and slot the plastic end of the fastener tabs into the void behind the carpeted panel of the boot area (Image J)




STEP 4. CONTINUED

- Slide these fastener tabs up or down so that they align with the hook fastener on the back of the boot liner. (Image K)
- Ensure the taped edge is clear of the striker loop before replacing the safety net cassette (blue arrow - Image I & Image L)



STEP 5. FITTING THE BACK

- Stick the 2 x 410mm/480 mm 50mm wide self-adhesive loop fastener to the panel located on either side of the lock at the tailgate end of the boot area. Attach the boot liner to it using the hook fastener on the liner. (Image M - shows the HYNO version)

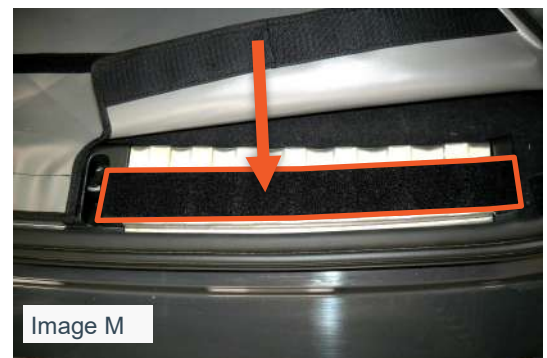

HYNO Rear Plus boot liner with additional D-ring access and prepped for a bumper flap



HYNO Rear Plus with Seat Split boot liner with additional D-ring access and prepped for a bootliner extension and bumper flap

OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle.

STEP 5A. SEAT FLAP

The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.

- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (Image 1)
- The flap is then placed over the rear head rests and down the front of the passenger seats. (Image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (Image 3)



STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)



Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Fit the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS PAGE 2

Please note: the following photos are not specific to your vehicle.

STEP 5D. BOOTLINER EXTENSION

The Bootliner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Bootliner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Bootliner extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 7)

Please note: SNIN versions will have two ties. (Blue arrow - Image 8)

- Fasten ties to the corresponding rear seat striker loop (Green arrow - Image 9)
- Repeat on opposite side

Please Note: The Seat Flap 5A, the Bumper Flap 5C & the Bootliner Extension 5D cannot be added at a later date.

