

# Mercedes GLC Coupe – 2016 Onwards

our ref: H0789

## Packaging requirements:

### BOOT LINER

- 4 x ref: 121
- 3 x ref: 128
- 19 x tabs self-adhesive loop fastener
- 2 x 260 mm 20mm wide self-adhesive loop fastener
- 2 x 350 mm 30mm wide self-adhesive loop fastener
- 4 x 170 mm 30mm wide self-adhesive loop fastener
- 2 x 100 mm 30mm wide self-adhesive loop fastener



Rear Plus with seat Split boot liner prepped for a seat flap, bumper flap and Boot liner Extension

### TAILGATE COVER

- 19 x tabs self-adhesive loop fastener



REF:121



REF:128



## VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** the plastic from grime and **REMOVE** all the **SILICONE** applied during manufacture and valeting.

To do this please:


1. Use a silicone remover, such as 'Auto-Glym Intensive Tar Remover' and apply generously to the surface you want to adhere to.
2. Using a separate clean & dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach 1 self-adhesive fastener tab to see if it sticks. (Repeat step 1 to 2 if necessary) A couple of spares have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once it has been in contact with silicone. Replacement kits are available from our website.*



## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Put the headrests in their highest position (*image A*)

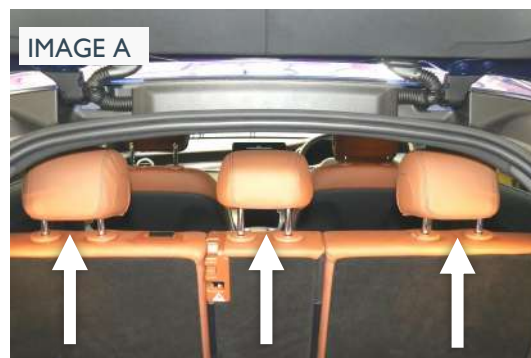

## STEP 2. FITTING BASE

- Lift the false floor and stick the three *ref. 128 tabs* (*Image B*) the loop fastener side should face the back of the car. Put the false floor back in place leaving exposed the top part (loop fastener) of the *ref. 128 tabs* .(*Image E*)
- Fold the rear seats flat prior to placing the boot liner into the boot.
- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (*Image C*)
- Push the two foam filled tabs sewn onto the front end of the base into the slot between the base and the rear seats. Lifting the seats a little may open up the gap. Take care not to skew the base. Fold the seats back up trapping the foam tabs. (*Image D*)
- Attach the base rear to the previously placed *ref. 128 tabs*. (*Image E*)



### STEP 3. FITTING THE FRONT

- - **PLUS / SPLIT VERSION ONLY** - fasten the hook & loop fasteners between the side panels and the seat panel. (image F)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (image G). Make sure to hold the front part of the base in position as not to pull the boot liner too far up. Repeat the procedure with the left and right headrests.

### REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. ('Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo')




### STEP 4. FITTING THE BACK

- Stick the 350 mm 30mm wide self-adhesive loop fastener onto the chrome panel located at the tailgate end of the boot side and in line with the hook fastener sewn onto the reverse side of the boot liner. (highlighted in yellow - image H)
- Repeat on opposite side.
- Stick the self-adhesive loop fastener tab in line with the hook fastener welded on the reverse side of the boot liner (highlighted in green - image H).



### STEP 5. FITTING THE SIDES

- Insert 2 x ref:121 fastener tabs on each side of the tailgate end of the boot. To do this peel back the rubber and slot the plastic end of the fastener tabs into the void behind the boots carpeted panel. (highlighted in green - Image I)
- Attach the self-adhesive loop fastener strips to the bottom edge of the side plastic panels just above the carpeted area. (highlighted in red, blue and pink - Image J) Repeat on opposite side.

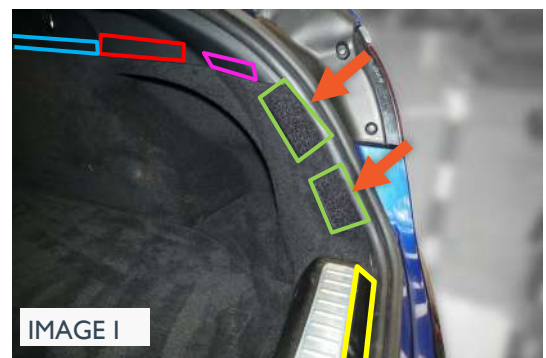

## STEP 5. FITTING THE SIDES

- On left side feed the loop fastener strips sewn on the boot liner under the net on all 3 sides (Image K & L)
- Place the left side panel into the recess. (Image M)
- Fasten the hook fastener strips sewn on the boot liner to the previous fed through loop fasteners behind the net.
- On both sides attach the top and back edge of the boot liner side to the previously attached loop fastener (refer to red, blue pink and green highlights - Image I + J)

IMAGE K



IMAGE L




IMAGE M



IMAGE N



IMAGE O

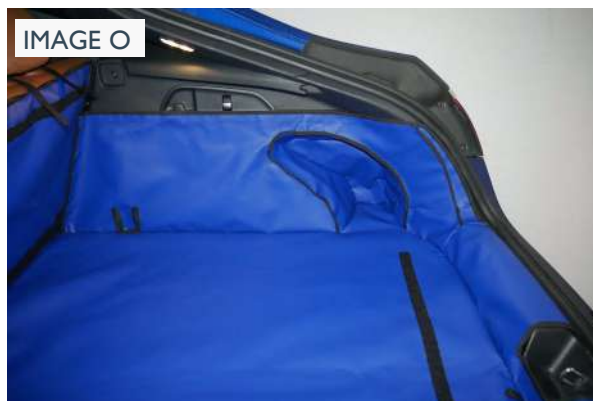

# OPTIONAL EXTRAS

Please note the following photos are non-specific to your vehicle

## STEP 5A. SEAT FLAP (+TAILORED)

- The **Tailored** Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (image 1)
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats.
- The additional Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests. (image 2)



## STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (image 3)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



## STEP 5C. BUMPER FLAP

- Fit boot liner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner. (image 4)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS page 2

*Please note the following photos are non-specific to your vehicle*

### STEP 5D. FLOOR EXTENSION

The 'Floor extension' offers superior protection to the rear seats when purchased in conjunction with a REAR PLUS option. (image 6 & 7)

- The Floor extension is designed to attach to a Rear Plus/Split version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.
- It will offer no full protection to the rear doors
- Attach the floor extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows - Image 7)



The Seat Flap 5A, The Bumper Flap 5C & The Floor Extension 5D cannot be added at a late date