

Ford Explorer 2020 to 2024

our ref: H0813-EU

FITTING KIT CONTENTS :

☐ R3FLD - BOOT LINER

- 2 x 350 mm 30mm wide self-adhesive loop fastener
- 2 x 530 mm 30mm wide self-adhesive loop fastener
- 2 x 840 mm 30mm wide self-adhesive loop fastener
- 4 x tabs self-adhesive loop fastener

☐ R3USE - BOOT LINER

- 2 x 350 mm 30mm wide self-adhesive loop fastener
- 2 x 530 mm 30mm wide self-adhesive loop fastener
- 4 x tabs self-adhesive loop fastener

☐ TAILGATE COVER

- 20 x tabs self-adhesive loop fastener



Left: R3FLD boot liner prepped for a seat flap, bootliner extension and bumper

Right: R3USE boot liner prepped for a flap bumper flap



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



Please note: not all of the photographs are specific to your vehicle.

ROW 3 SEAT CONFIGURATION

- R3FLD - 3rd-row seats folded and not usable
- R3USE - 3rd-row seats upright and usable

STEP 1. PREPARATIONS

- **R3FLD only** - Slide the 2nd-row seats as far back to the tailgate & ensure the 3rd-row seats are folded.
- Put the headrests in their highest position (**Image A**)




STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the underside attach directly to the carpet. (**Image B**)

R3FLD only

- Unfasten the two sets of hook and loop fastener seat belt openings in the side panels.
- Feed the seat belts into the slots in the base panel. (**Image C**)
- Wrap the bootliner sides behind the seat belts and re-fasten the seat belt openings (**Image D - generic image**)

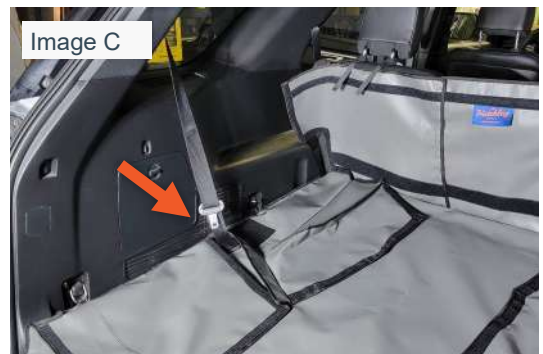

STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image E)
- Fasten the hook & loop fastener straps around all headrest posts. (Image F - generic image). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up.

REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)



STEP 4. FITTING THE SIDES

- On both sides of the boot stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the boot liner as highlighted on Image G1 & G2.

R3FLD

- Orange 840 mm loop fastener
- blue 530 mm loop fastener
- Yellow 1 loop fastener tab

R3USE

- blue 530 mm loop fastener
- Yellow 3 loop fastener tabs

- If necessary snip the self-adhesive fastener strips at the corners to ease around the curves.
- Fasten the hook fastener sewn onto the top and back edge on both sides of the boot liner directly onto the previously attached loop fasteners. (Image H & I)



Image H - R3FLD - bootliner sides

Image I - R3USE - bootliner sides

STEP 5. FITTING THE BACK

- On both sides of the panel located on either side of the lock at the tailgate end of the boot area, stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the boot liner as highlighted on (Image J)
 - green 2 x 350 mm loop fastener
 - Yellow 2 x1 loop fastener tab
- Fasten the hook fastener sewn & welded onto the back edge of the boot liner directly onto the previously attached loop fasteners. (Image K & L)

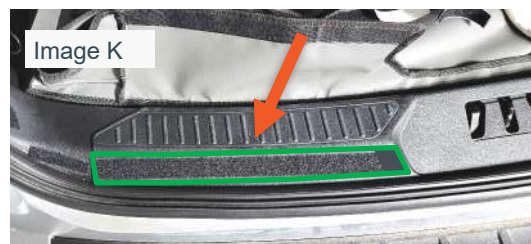


Image L - R3FLD



Image L - R3USE

OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

STEP 5A. SEAT FLAP & TAILORED SEAT FLAP

- The Tailored Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (Image 1)
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip on the Boot liner just below the top of the rear seats. (Image 2)
- The Rectangular Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position this flap extends the coverage over the exposed section of the seat backs and the headrests. (Image 3)



STEP 5B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)




Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 5C. BUMPER FLAP

- Install the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

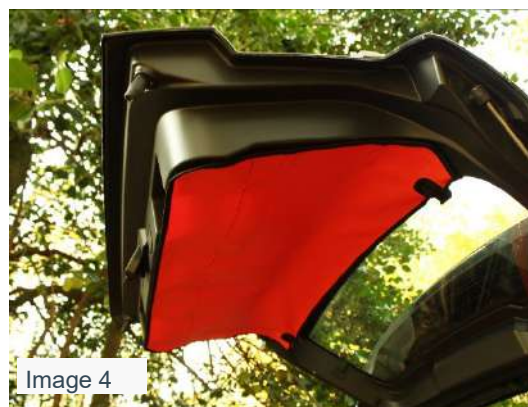

OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

STEP 5D. BOOTLINER EXTENSION

The Bootliner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Bootliner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Bootliner extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 7)
- Attach the hook fastener tab welded on the back corner of the boot liner extension to the loop fastener previously attached to the plastic side panel (Green arrow - Image 8)
- Repeat on opposite side



Please Note: the Seat Flap, the Bumper Flap & the Bootliner Extension cannot be added at a later date.

STEP 5E. 3RD-ROW SEAT BELT COVERS

- Install the boot liner
- Wrap the seat belt covers around the 3rd-row seat belts and fasten the hook and loop fasteners. (Image 9 - generic image)

