

Toyota Highlander 7 seater - 2020 Onwards

Our ref: H0814

FITTING KIT CONTENTS:

BOOT LINER R3FLD

- 2 x 365 mm 30mm wide self-adhesive loop fastener
- 2 x 350 mm 30mm wide self-adhesive loop fastener
- 2 x 700 mm 30mm wide self-adhesive loop fastener
- 11 x tabs self-adhesive loop fastener

BOOT LINER R3USE

- 2 x 365 mm 30mm wide self-adhesive loop fastener
- 2 x 700 mm 30mm wide self-adhesive loop fastener
- 5 x tabs self-adhesive loop fastener

TAILGATE COVER

- 22 x tabs self-adhesive loop fastener

BOOTLINER EXTENSION

- 2 x tabs self-adhesive loop fastener



Left: R3FLD boot liner prepped for a seat flap, boot liner extension and bumper flap

Right: R3USE boot liner prepped for a bumper flap and seat flap



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Set the seats position to the specification of your order.
- Slide the seats as far back to the tailgate
- Put the headrests in their highest position.
(Image A)



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the underside attach directly to the carpet.
(Image B)



STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image C)
- **R3FLD**- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.
- **R3USE**- Loop the elastic fastener straps around both headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Attach the middle of the front panel directly to the carpeted area of the rear seats using the hook fastener on the boot liner.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)

STEP 4. FITTING THE SIDES-R3FLD

- On both sides of the boot stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the boot liner as highlighted on **Image E & F**.



- Green 350 mm loop fastener
- Blue 700 mm loop fastener
- Yellow loop fastener tabs

- If necessary snip the self-adhesive fastener strips at the corners to ease around the curves.
- Fasten the hook fastener sewn onto the top and back edge on both sides of the boot liner directly onto the previously attached loop fasteners. (**Image F**)




STEP 4. FITTING THE SIDES-R3USE

- On both sides of the boot stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the boot liner as highlighted on **Image G & H**.



- Blue 700 mm loop fastener
- Yellow loop fastener tabs

- If necessary snip the self-adhesive fastener strips at the corners to ease around the curves.
- Fasten the hook fastener sewn onto the top and back edge on both sides of the boot liner directly onto the previously attached loop fasteners. (**Image H**)

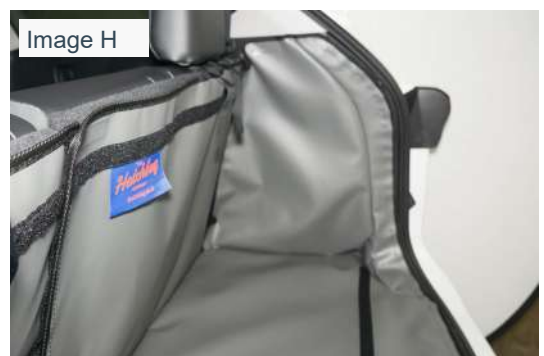

STEP 5. FITTING THE BACK

- Stick the 365 mm 30mm wide loop fastener to the panel located on either side of the lock at the tailgate end of the boot area. Attach the boot liner to it using the hook fastener on the liner. (**highlighted in orange-Image I**)



- Stick 1 self-adhesive fastener tab to the inside center of the back panel, aligned with the hook fastener on the back panel of the boot liner. (**arrow - Image I**)



OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

STEP 6A. SEAT FLAP & TAILORED SEAT FLAP

- The Tailored Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (Image 1)
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip on the Boot liner just below the top of the rear seats. (Image 2)
- The Rectangular Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position this flap extends the coverage over the exposed section of the seat backs and the headrests. (Image 3)



STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 6C. BUMPER FLAP

- Install the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.




OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

STEP 6D. BOOTLINER EXTENSION

The Bootliner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Bootliner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Bootliner extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 7)
-  Stick one self-adhesive loop fastener tab and attach the liner to it (Green arrow - Image 8)
- Repeat on opposite side

Please Note: the Seat Flap, the Bumper Flap & the Bootliner Extension cannot be added at a later date.

STEP 6E. FREQUENT USE KIT

- If you frequently remove/install your boot liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Fitting Kit. These tabs are placed between the boot liner and the boot carpet. (Image 9 & 10)

The Frequent Use Kit is an accessory available to purchase from our on-line store.

