

Hyundai i20 (inc. i20N) - 2020 Onwards

Our ref: H0829

FITTING KIT CONTENTS:

BOOT LINER

- **ALL SHAPES** - 2 x 700 mm 30mm wide self-adhesive loop fastener
- **SH1 ONLY** - 11 x tabs self-adhesive loop fastener
- **SH2 - FRSD ONLY** - 6 x tabs self-adhesive loop fastener
- **SH2 - FLOW ONLY** - 7 x tabs self-adhesive loop fastener
- **SH2 ONLY** - 330 mm 30mm wide self-adhesive loop fastener



SH1– FNO- Rear Plus with Seat Split boot liner prepped for a seat flap, boot liner extension and bumper flap.

TAILGATE COVER

- 18 x tabs self-adhesive loop fastener



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Set the floor level to fit the specification of your order.
- Put the headrests in their highest position.
(Image A)



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the underside attach directly to the carpet.
(Image B)



STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image C)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.


REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)



STEP 4. FITTING THE SIDES

- On both sides **(SH1)** OR right hand side only **(SH2)** of the boot stick the following loop fastener tabs in line with the hook fasteners welded on the reverse side of the boot liner as highlighted on **Image E & F**.
 - Yellow *loop fastener tabs*
- On right side put the straps through the cuts on the liner side (**green arrows Image F & G**)
- **SH2 ONLY**– Stick the 330mm self-adhesive loop fastener as shown in blue. Also stick 1x loop fastener tabs as highlighted. (**Image H**)
- Fasten the hook fastener sewn onto the top and back edge on both sides of the boot liner directly onto the previously attached loop fasteners. (**Image I & J**)

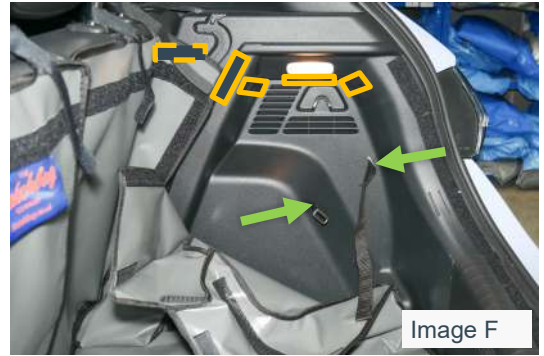

STEP 5. FITTING THE BACK

- Stick the 2 x 700 mm self-adhesive loop fastener to the tailgate edge of the boot area starting from the lock in the middle and running along the plastic and up along the sides (**highlighted in orange-Image K**).
- **Shape 1 & 2 FLOW ONLY** stick 1 self-adhesive fastener tab to the inside center of the back panel, aligned with the hook fastener on the back panel of the boot liner. (**highlighted in yellow-Image K**)
- Snip the self-adhesive fastener strips at the corners to ease around the curve. Attach the boot liner to it using the hook fastener on the liner.



FITTING IMAGES OF THE DIFFERENT SHAPES



SH1-FNO - left side



SH1- FNO - right side



SH2-FLOW-SPKNO - left side



SH2- FLOW-SPKNO - right side



SH2-FRSD-SPK- left side



SH2-FRSD-SPK- right side

OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

STEP 6A. SEAT FLAP

The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.

- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (Image 1)
- The flap is then placed over the rear head rests and down the front of the passenger seats. (Image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (Image 3)

STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)



- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

STEP 6C. BUMPER FLAP

- Fit the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

STEP 6D. BOOTLINER EXTENSION

The Bootliner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Bootliner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Bootliner extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the elastic straps around the headrest posts. (HRA) OR Fasten the hook & loop fastener straps around the headrest posts. (HRB) (Blue arrows - Image 7)
- Fasten ties to the corresponding rear seat striker loop (Green arrow - Image 8)
- Repeat on opposite side



Please Note: the Seat Flap, the Bumper Flap & the Bootliner Extension cannot be added at a later date.