

Mercedes Benz V-Class - 2014 Onwards
7,8,9 Seater (3rd Row Usable) (inc. EQV 2020 Onwards)
Our ref: H0891

FITTING KIT CONTENTS:

BOOT LINER

- 2 x 410mm 50mm wide self-adhesive loop fastener
- 1 x 470mm 50mm wide self-adhesive loop fastener
- 2 x 630mm 30mm wide self-adhesive loop fastener

SH1 additional

- 2 x 480mm 50mm wide self-adhesive loop fastener

SH2 additional

- 2 x 730mm 50mm wide self-adhesive loop fastener

TAILGATE COVER

- 1 x 1300mm 30mm wide self-adhesive loop fastener
- 1 x 580mm 30mm wide self-adhesive loop fastener
- 1 x 490mm 30mm wide self-adhesive loop fastener
- 9 x tabs self-adhesive loop fastener



Rear Plus with Seat Split boot liner prepped for a seat flap and bumper flap.



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



Please note: not all of the photographs are specific to your vehicle.

STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Slide the seats as far back to the tailgate
- Put the headrests in their highest position. (Image A)



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (Image B)



STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image C)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image D). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.



REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)




STEP 4. FITTING THE SIDES

- On both sides of the boot stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the boot liner as highlighted on **Image E**
 - Blue SH1 - 480 mm loop fastener
 - SH2 - 730 mm loop fastener
 - Pink 630 mm loop fastener
- Fasten the hook fastener sewn onto the top and back edge on both sides of the boot liner directly onto the previously attached loop fasteners. (**Image F & G**)
- The lower sections of the side panels of the boot liner are attached directly to the carpeted area on the sides of the boot. (**white arrows-Image F & G**)



STEP 5. FITTING THE BACK

- Stick the following loop fasteners to the panel located on either side of the lock at the tailgate end of the boot area as highlighted on **Image H**.
 - Green 410 mm loop fastener
 - Yellow 470 mm loop fastener
- Attach the boot liner to it using the hook fastener on the liner.

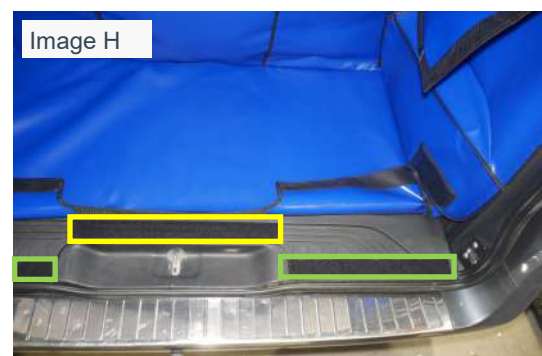

OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.


STEP 6A. SEAT FLAP & TAILORED SEAT FLAP

- The **Tailored** Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (Image 1)
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip on the Boot liner just below the top of the rear seats. (Image 2)
- The **Rectangular** Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position this flap extends the coverage over the exposed section of the seat backs and the headrests. (Image 3)



STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener will be stuck. (Image 4)
 - Red 1300 mm loop fastener
 - Orange 580 mm loop fastener
 - Purple 490 mm loop fastener
 - White 9 x loop fastener tabs
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic / metal trim.

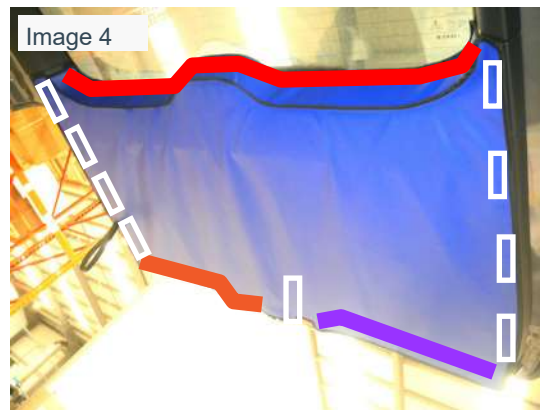

STEP 6C. BUMPER FLAP

- Install the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

