

Volkswagen Caddy Maxi 7 Seater - 2020 Onwards

Our ref: H0892

FITTING KIT CONTENTS:

BOOT LINER

- 1 x 480mm 30mm wide self-adhesive loop fastener
- 1 x 170mm 30mm wide self-adhesive loop fastener
- 1 x 280mm 30mm wide self-adhesive loop fastener
- 2 x REF.:113 tabs

ADDITIONAL TO R3OUT ONLY

- 1 x 300mm 30mm wide self-adhesive loop fastener
- 1 x 400mm 30mm wide self-adhesive loop fastener
- 1 x 180mm 30mm wide self-adhesive loop fastener
- 3 x tabs self-adhesive loop fastener

TAILGATE COVER

- 24 x tabs self-adhesive loop fastener



Rear Plus with Seat Split boot liner prepped for a seat flap, boot liner extension and bumper flap.



Ref:113



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*




STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Put the headrests in their highest position. (Image A)



STEP 2. FITTING THE BASE

- Place the 2x REF.:113 tabs on the carpet at the corners behind the rear seats, in line with the hook fasteners welded on to the corresponding corners on the boot liner base. (Image B)
- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the underside attach directly to the carpet and the REF.:113 tabs. (Image C)

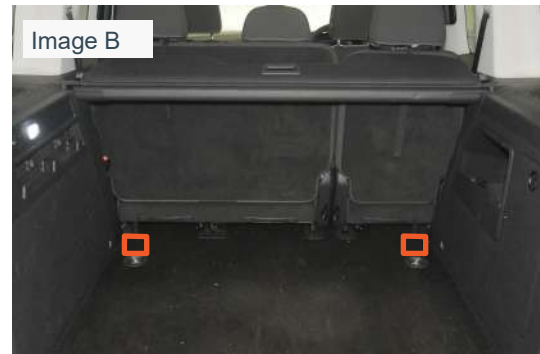

STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image D)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image E). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.

REAR PLUS VERSIONS


You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)



STEP 4. FITTING THE SIDES


R3OUT ONLY

- On both sides of the boot stick the following loop fasteners in line with the hook fasteners sewn & welded on the reverse side of the boot liner as highlighted on [Image F & G](#).
 - Orange 400 mm loop fastener
 - Green 180 mm loop fastener
 - Pink 300 mm loop fastener
 - Yellow loop fastener tabs
- Fasten the hook fastener sewn onto the top and back edge on both sides of the boot liner directly onto the carpet and the previously attached loop fasteners.

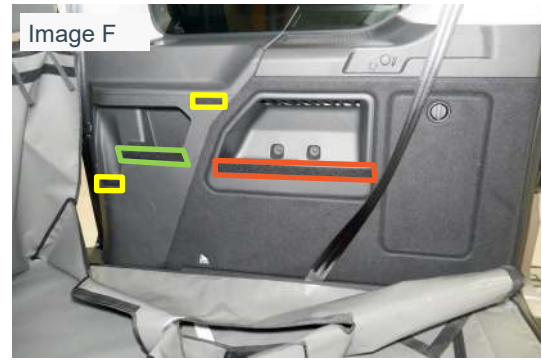

R3USE ONLY

- The side panels of the boot liner are attached directly to the carpeted area on the sides of the boot. Align the hook fasteners along the top and back edge of the boot liner side panel with the edges of the carpeted area. ([Image H](#))

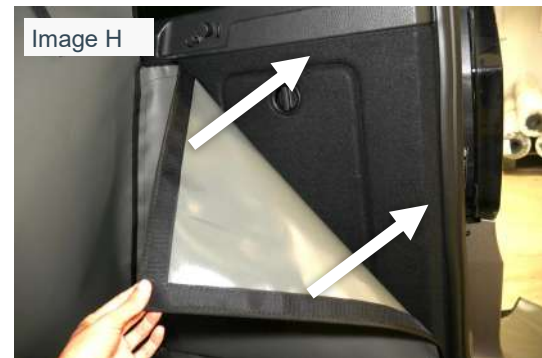

STEP 5. FITTING THE BACK

- Stick the following loop fasteners to the panel located on either side of the lock at the tailgate end of the boot area as highlighted in [Image I](#).
 - Green 480 mm loop fastener
 - Orange 170 mm loop fastener
 - Pink 280 mm loop fastener
- Attach the boot liner to them using the hook fastener on the liner.



OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

STEP 6A. SEAT FLAP & TAILORED SEAT FLAP

- The Tailored Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (Image 1)
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip on the Boot liner just below the top of the rear seats. (Image 2)
- The Rectangular Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position this flap extends the coverage over the exposed section of the seat backs and the headrests. (Image 3)



STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 6C. BUMPER FLAP

- Install the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



Please Note: the Seat Flap and the Bumper Flap cannot be added at a later date.



OPTIONAL EXTRAS PAGE 2

STEP 6D. FREQUENT USE KIT

- If you frequently remove/install your boot liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Fitting Kit. These tabs are placed between the boot liner and the boot carpet. (Image 6 & 7)

The Frequent Use Kit is an accessory available to purchase from our on-line store.



Image 6



Image 7