

Land Rover Range Rover Sport - 2022 Onwards

Our ref: H0898

FITTING KIT CONTENTS:

- BOOT LINER
 - 2 x 410mm 30mm wide self-adhesive loop fastener
 - 2 x 580mm 20mm wide self-adhesive loop fastener
 - 1 x 260mm 20mm wide self-adhesive loop fastener
 - 6 x REF: 121
 - 1 x REF:124 @ 260mm

- BOOT LINER EXTENSION
 - 2 x tabs self-adhesive loop fastener

- TAILGATE COVER
 - 19 x tabs self-adhesive loop fastener



RCS: Rear Plus with Seat Split boot liner prepped for a seat flap, boot liner extension and bumper flap.



Ref:121



Ref:124



VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

**The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Put the headrests in their highest position. (Image A)
- Lift the boot floor panel at the rear seat end, place the PVC sleeve over the edge of the panel with the hook fastener facing towards you and place the panel back into its position. (Image B&C)
- Lift the boot floor at the tailgate end and stick the 260mm self-adhesive loop fastener centric behind the tailgate lock as shown in (Image D)
- Attach the REF: 124 to the previously fitted loop fastener so the loop fastener segment protrudes after placing the floor panel back into its position. (highlighted in blue - Image E)



STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the underside attach to the previously placed sleeve and Ref: 124 (Image F)



STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image G)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image H). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.


REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT options on website to see detailed photo.**)



STEP 4. FITTING THE SIDES

- Insert **3x** Ref:121 fastener tabs on each side of the tailgate end of the boot. To do this, peel back the rubber and slot the plastic end of the fastener tabs into the void behind the carpeted panel of the boot area (Image I & J)
- Stick the **580mm** self-adhesive loop fastener to the bottom edge of the plastic side panels just above the carpeted area. (Image K)
- Attach the boot liner side to the previously fitted loop fastener.

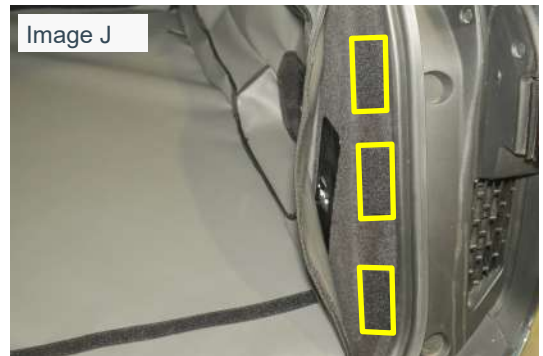

STEP 5. FITTING THE BACK

- Stick the **410mm** self-adhesive loop fastener to the panel located on either side of the lock at the tailgate end of the boot area. Attach the boot liner to it using the hook fastener on the liner. (Image L)




OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

STEP 6A. SEAT FLAP & TAILORED SEAT FLAP

- The Tailored Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc. (Image 1)
- Lower the headrests
- Attach the Tailored Seat Flap to the loop fastener strip on the Boot liner just below the top of the rear seats. (Image 2)
- The Rectangular Seat Flap is designed **only** to be used in conjunction with the **Rear Plus/Split**. With the rear seats in the folded position this flap extends the coverage over the exposed section of the seat backs and the headrests. (Image 3)

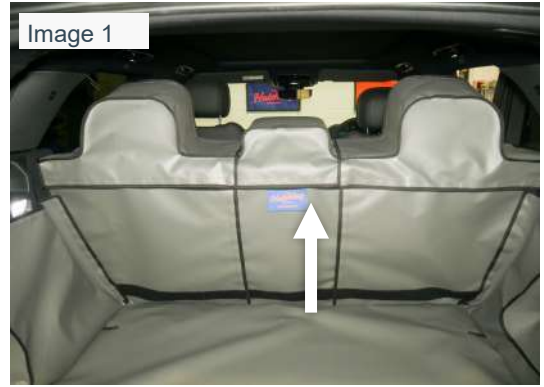

STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)
- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



STEP 6C. BUMPER FLAP

- Install the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

STEP 6D. BOOT LINER EXTENSION

The Boot liner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Boot liner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Boot liner extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 7)
- Stick 1x loop fastener tab to the position highlighted by the Green arrow - Image 8 Attach the hook fastener tab welded on the back corner of the boot liner extension to it on the boot side
- Repeat on opposite side



Please Note: the Seat Flap, the Bumper Flap & the Boot liner Extension cannot be added at a later date.