# Seat Ateca - 2016 on

Our ref: H0654-SE

## Question 1 - Floor identification

### Boot shape 1 - SH1

AVAILABLE

No false floor - Raised

- Has a shallow floor
- No hinge visible at bottom of seats
- No plastic panels in BOTH recesses

### Boot shape 2 - SH2

AVAILABLE

No false floor-Low-1 Pocket

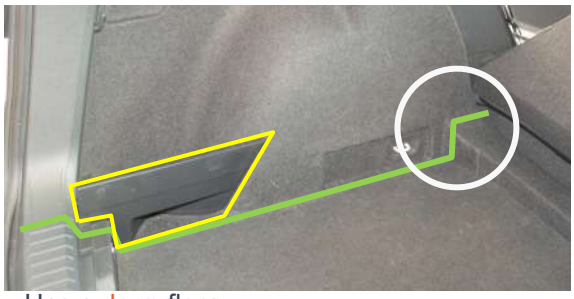

- Has a deep floor
- Hinge between seats
- With left side plastic panel in recess

### Boot shape 3 - SH3

AVAILABLE

No false floor-Low-No Pocket

- Without left side plastic panel in recess

NEXT PAGE - 2 MORE FLOOR VERSIONS

# Seat Ateca - 2016 on

Our ref: H0654-SE

## Question 1 - Floor identification - Continued

### Boot shape 4 - SH4

AVAILABLE

With false floor - **Raised**

- Floor is adjustable—set in highest position
- Flat base
- Floor panel has handle (blue highlight)
- Has removable plastic panels in BOTH recesses (yellow)

### Boot shape 5 - SH5

AVAILABLE

With false floor - **Lowered**

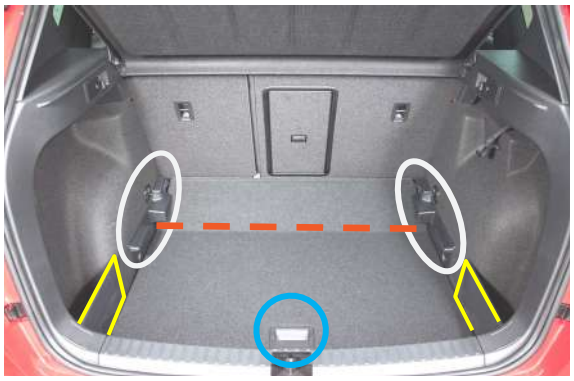

- Floor is adjustable—set in lowest position
- Floor panel has handle (blue)
- Plastic mounts visible on each side (white highlights)
- Angled base (orange highlight)
- Has removable plastic panels in BOTH recesses (yellow)

PLASTIC PANEL GUIDE

# Seat Ateca - 2016 on

Our ref: H0654-SE

## Plastic Panels

The boot liner is designed to expose the plastic panel and accommodating the removal*. This allows the following:

**this is only applicable to the variations that have plastic panels or plastic panel mounts.*

1. The plastic panels can be removed to create a wider load area.
2. Allowing the boot liner to fit, if the plastic panels have been lost.
3. Allowing the boot liner to fit, if your version does not have a plastic panel option

Please Note:

If the plastic panel has been removed, an area of the boot will be exposed through the gap in the boot liner. (orange highlight)