Tesla Model Y

UK H0959

2025 Onwards

Fitting Kit Contents

- [ ] Bootliner- SH1

No Additional Fixings

- [ ] Bootliner- SH2

- 2 x 280 / 30
- 2 x 70 / 30

- [ ] Tailgate Cover-A

No Additional Fixings

- [ ] Tailgate Cover-B

- 15 x tabs

"quantity x length / width" in mm

*Please be aware that your bootliner may be different depending on your options/extras selection

Before you fit the bootliner

To ensure the self-adhesive fasteners securely adhere, it's ***absolutely essential*** to thoroughly ***eliminate*** any ***silicone*** residues left from manufacturing and valeting processes.

To achieve this you will need a silicone remover. We recommend ***Autoglym® Intensive Tar Remover****

*can be purchased from Halfords / Amazon amongst other retailers.

Preparations

-Ensure your boot floor and seats are set to match your order.

-Remove the load cover. It may be replaced later.

-Slide the seats as far back to the tailgate as possible, if applicable.

1

Fitting key

Where you find this symbol the bootliner's hook fastener will attach directly to the carpet [1]

When this is not suitable, we provide self-adhesive loop fasteners to stick onto plastic/metal trim:

Where you find this symbol, follow these steps:

1) Apply *Autoglym® Intenisve Tar remover** generously to a cloth and scrub the highlighted surface areas.

2) Dry surface thoroughly with a separate cloth until it drags.

3) Test the surface by attaching one fastener tab - it should stick well, if not repeat previous steps[2]

Silicone is used during car manufacturing/valeting, it will interfere with the adhesion.

*can be purchased from Halfords / Amazon amongst other retailers.

Tips:

- [1] If you frequently remove your boot liner from your vehicle consider our ***Frequent Use Fitting Kit*** to prevent carpet fluffing, available for purchase from our "*Accessories*" page.
- [2] If temperatures are low, run your car for a little bit so that the boot reaches room temperature or fit your liner once you have been out for a drive.
- For optimal adhesion of the fasteners, do not remove the bootliner for approx. 48 hours.

Notes:

- The adhesive fasteners ***cannot be used once they have been in contact with silicone.*** Replacement Fitting Kits can be purchased from our accessories page.
- Adherence to the instructions will affect the performance of the Fitting Kit. Please note *The Hatch-bag Company* will not accept requests for free replacements if the adhesives come loose after use.

Refer to colour code in the first page Fitting Kit Contents

2

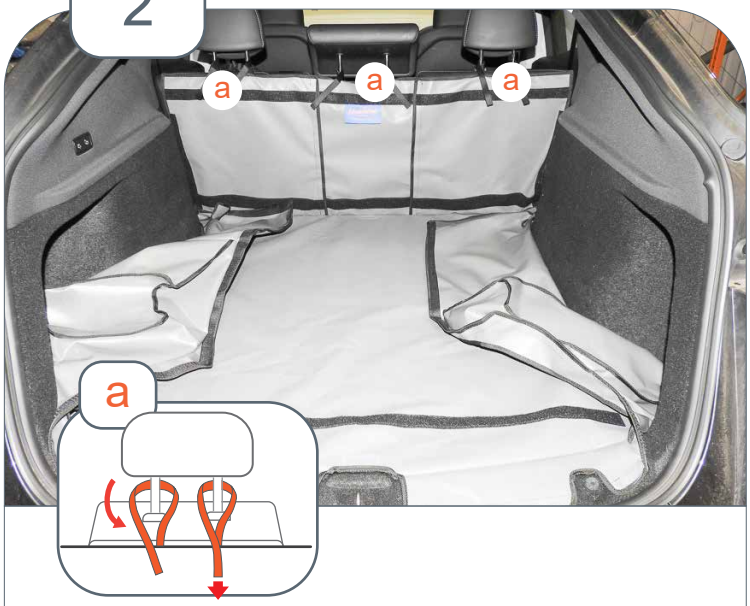

-Ensure the base is aligned to fit the boot edges.

-Fasten the headrest straps without pulling the base off the floor.

If you want to fold the rear seats later, you MUST unfasten the headrest straps first!

3

Tips:

- Snip the self adhesives to ease around the curves

4

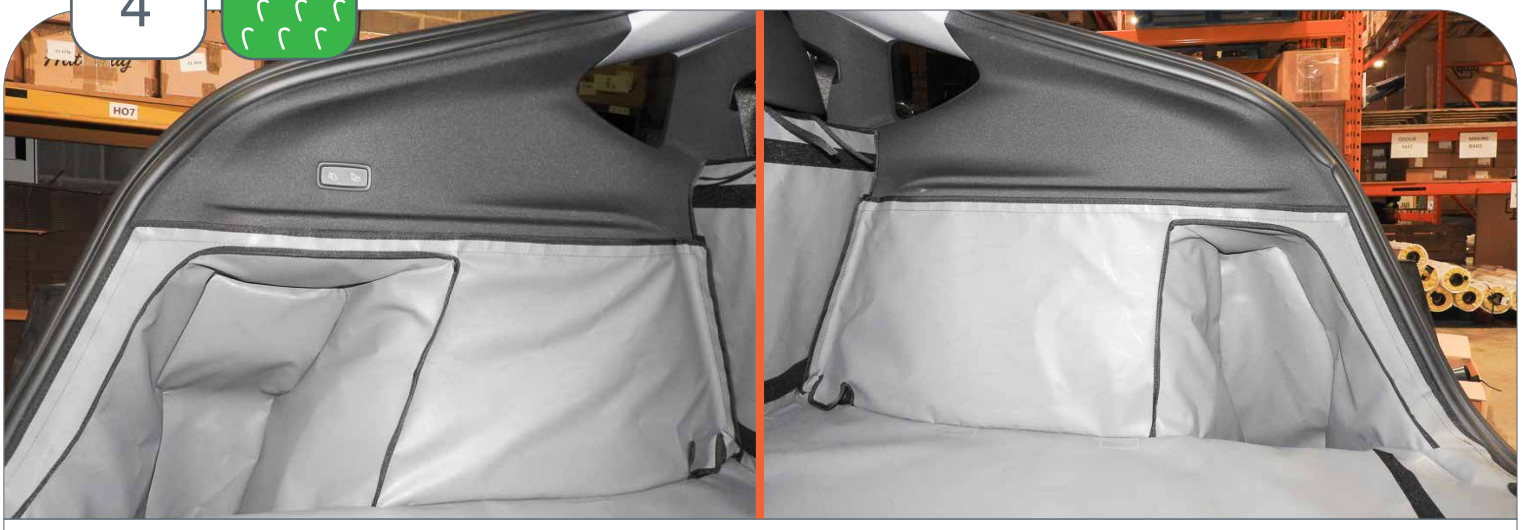

*Please be aware that your boot liner may be different depending on your options/extras selection

Tips:

- Commence fitting from the tailgate end.
- For Rear Plus versions, fasten the side to the front panel from bottom to top

Optional extras

Note: not all the photos are specific to your vehicle

Bumper Flap

-Attach the Bumper Flap to the loop fastener strip located on the base of the boot liner.

Tailored Rear Seat Flap

-Lower the headrests.

-Attach the Seat Flap to the loop fastener strip located just below the headrest straps.

-Use additional flaps when folding seats.

Tailgate Cover

-Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. Only use tabs if surface is plastic not carpet.

-Begin with the central top and bottom fastener.

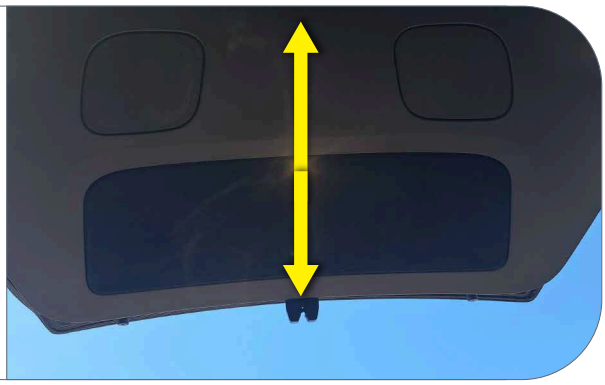

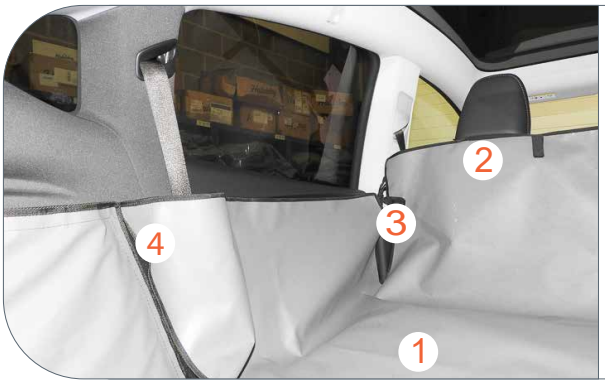

Bootliner Extension

1. Attach the Boot liner extension to the main boot liner.
2. Fasten the elastic fastener straps around the head-rest.
3. Fasten the two ties in the corner together.
4. Attach behind the side panel of the boot liner.