


Mercedes GLE 4x4 2015 to 2019

Packing requirements

Boot Liner

- 4 X REF:121 plastic/fastener tab
30mm wide self-adhesive loop fastener cut @
920mm long



REF: 121

Tailgate cover

- Minimum of 22 self-adhesive loop fastener tabs



PHOTO: Rear plus with seat split

VERY IMPORTANT PREPARATION

To ensure a good bond, when using the self-adhesive hook & loop to attach the Bootliner to the plastic / metal trim (Not the carpet); it is most important to remove silicone film from the vehicle trim. Silicone is applied during manufacture and can also be found in many valeting products. It is highly likely there will be a build-up of silicone. Before applying any self-adhesive fastener pads, the surface **MUST** be thoroughly cleaned using a silicone remover. (The fasteners cannot be used once it has been in contact with silicone). We recommend "Intensive Tar Remover" made by AutoGlym and available from Halfords. Wipe off thoroughly any residue with a separate clean dry cloth.

Unfortunately we are unable to supply this product, as it cannot be transported via our postal carrier.

NOTE: the adhesive takes 24hrs to reach full adhesion – do not disturb during.



ATTENTION

The carpeted area highlighted in green will not be covered with by the boot liner

The area highlighted in blue shows there will be a gap between the boot liner and the car boot wall, dust may fall into this opening

PREPARATION

- Remove the load cover cassette, it can be replaced later.
- Unlock and recline rear seats.
- Place liner into car and unfold.



LOAD COVER

FITTING

BASE

- Position base of liner snugly into place
- Start at tailgate end.
- Using the long length of self adhesive loop fastener, attach the tailgate end of the base panel to the plastic section of the vehicle's tailgate plate.
(Please note: peel back the rubber seal to attach the width of self adhesive fastener)



BASE cont.

- Please note this photo is non-specific to your car
Push the two foam tabs down into the void between the rear seat and the boot floor.

Re-lock the rear seat uppers, trapping the base foam tabs securely.



FRONT

- Hook & loop fastener straps align to headrests.
- Pass around each post and fasten back onto themselves.
Attach the two hooks to the rear seat locking loop.

REAR PLUS VERSIONS

- YOU MUST UNFASTEN THE HOOK & LOOP FASTENERS + THE HEADREST STRAPS BEFORE YOU RECLINE THE REAR SEAT UPPERS (Please refer to REAR PLUS options on website to see detailed photo')



SIDES

- Position side panels snugly into place.

Photo A

- Central elastic loop (formed between two metal clips) sits around central plastic hook.

Photo B - TAILGATE END

- Pull on the tape to expose the loop end of the elastic bungee.
- Pass the loop over the plastic hook at the tailgate end.

Photo C - REAR SEAT BELT TIDIES

- Pull on the tape to expose the loop end of the elastic bungee. It may be easier to perform this task perched on the rear seat looking back into the boot.
- Pass the loop over the Rear Seat Belt Tidy



Photo A



Photo B



Photo C
(Photo shows Rear Plus Option)

SIDES cont.

Please note these photos are non-specific to your ca

Photo D : 2 x Ref 121 tabs.

- Locate the two hook fastener welds at the tailgate end of the sides.
- Pull back the rubber seal on the door aperture to reveal the edge of the carpeted panel. Slide the plastic section of the clip under this.

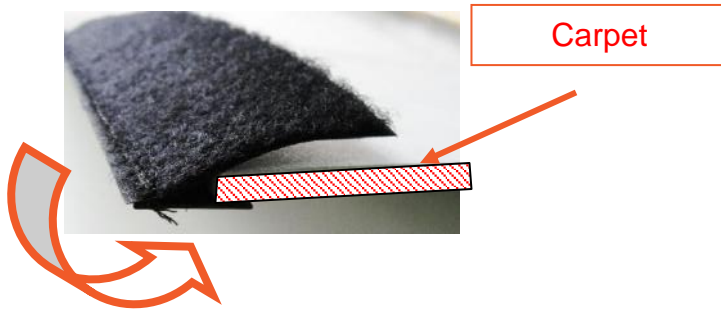


Photo D



Photo E

Photo E

- Reposition to align with hook fastener welds, and fasten close.

Optional extras

TAILGATE COVER

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.
- Wrap the 6 hook fastener extension tabs around the side of the tailgate and fix to plastic with the self-adhesive loop fastener



Non-specific photo



loop fastener extensions wrap

BUMPER FLAP

- Fit Bootliner
- Attach the Bumper Flap to the loop fastener strip that has been manufactured into the base of the boot liner.
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.
- Please note that the edges of the fabric are not bound so that any mud, dirt or water can run off.



SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage over any exposed section of the seat backs and the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot Liner just below the top of the rear seats.
- The flap is then placed over the rear head rests and down the back of the passenger seats.
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.



FLOOR EXTENSION

The "Floor extension" offers superior protection to the rear seats when purchased in conjunction with a **REAR PLUS** option.

- The Floor extension is designed to attach to a Rear Plus version liner.
- It offers additional protection to the back of the front seats and the extended floor area when the rear seats are folded flat.

The max width is 148cm (see photo on left).

It will offer no protection to the rear doors

PLEASE REQUEST FURTHER INFORMATION AS YOU PLACE YOUR ORDER

(These items cannot be added at a late date)

