

## Volkswagen Tiguan - 2016 to 2024

Floor - Removed, Raised & Mid Level, Seats - Reclined & Upright

Our ref: H0626-FNO/FRSD/FMID & SEREC/SEUP

### FITTING KIT CONTENTS:

#### ☐ BOOT LINER

- 1 x 660 mm 30mm wide self-adhesive loop fastener
- 1 x 660 mm 30mm wide self-adhesive loop fastener
- 2 x 890 mm 30mm wide self-adhesive loop fastener
- 1 x tabs self-adhesive loop fastener



SH1: Rear Plus with Seat Split boot liner prepped for a boot liner extension and bumper flap.

#### ☐ TAILGATE COVER

- 22 x tabs self-adhesive loop fastener

#### ☐ FLOOR EXTENSION

- 2 x tabs self-adhesive loop fastener



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



## STEP 1. PREPERATIONS


- Please remove the load cover, it may be replaced once the boot liner has been fitted
- Please set your false floor to the correct level based on your order. (raised or lowered)

### SEATS RECLINED OPTION

- Set the incline of the seats to their most reclined position. (image A)

### SEATS UPRIGHT OPTION

- Set the incline of the seats so that the seatbacks are 13cm from the point shown in image B.

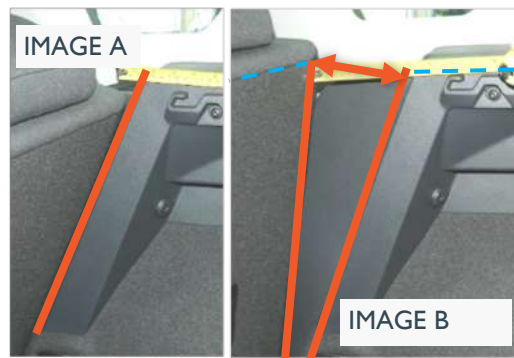

## STEP 2. FITTING BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. (image C)

### FNO & FMID FLOOR VERSIONS ONLY

- Fasten the front end of the base onto the step between the boot floor and the seat backs (image D). The base is slightly narrower & shorter than the boot floor at this point in order to go over the plastic extrusions on both sides of the boot.



## STEP 3. FITTING THE FRONT

- - PLUS / SPLIT VERSION ONLY - fasten the hook & loop fasteners between the side panel and the seat panel. (image E)
- Starting with the middle headrest, loop the hook & loop fastener straps around both headrest posts. (image F). Make sure to hold the front part of the base in position as not to pull the Hatchbag too far up. Repeat the procedure with the left and right headrests.


### REAR PLUS VERSIONS

You MUST unfasten the hook & loop fasteners + the headrest straps before you recline the rear seat uppers. ('Please refer to REAR PLUS options on website to see detailed photo')



## STEP 4. FITTING THE SIDES

- Place the side panels in position, pushing the boot liner pockets into the recesses on both sides of the boot. Push the metal D-ring through the holes on each side of the boot liner. (Image G)
- Attach the 640mm loop fastener strip onto the plastic on the top edge of the driver side recess. (Image H) Snip the loop fastener at the corners to ease them around the bends, lights and power plug.
- **SH1 ONLY:** Repeat this step with the passenger side using the 660mm long loop fastener strip. (Image I)
- **SH3 ONLY:** Repeat this step with the passenger side by cutting the 660mm long loop fastener strip to follow the shape of the boot side and attach it in the position shown on. Image J
- Attach the hook fastener sewn onto the boot liner to the loop fastener stuck to both sides of the boot.

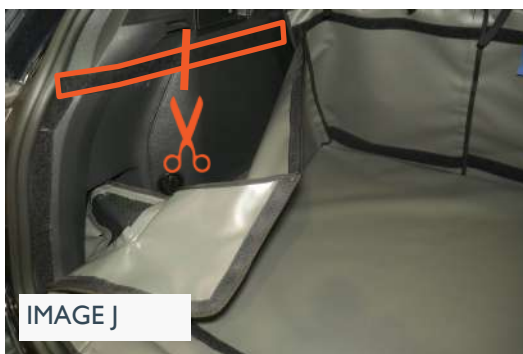

## STEP 4. FITTING BACK

- Attach the two 890mm loop fastener strips onto the plastic edge at on both sides of the tailgate lock going up the sides (Image K). Snip the loop fastener at the corners to ease them around the bends.
- Attach the boot liner to these loop fastener strips.





## OPTIONAL EXTRAS

Please note: not all of the photographs are specific to your vehicle.

### STEP 6A. SEAT FLAP

The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.

- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (Image 1)
- The flap is then placed over the rear head rests and down the front of the passenger seats. (Image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (Image 3)



### STEP 6B. TAILGATE COVER

- Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)



- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.



### STEP 6C. BUMPER FLAP


- Fit the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.

## OPTIONAL EXTRAS PAGE 2

Please note: not all of the photographs are specific to your vehicle.

### STEP 6D. BOOTLINER EXTENSION

The Bootliner extension provides superior protection for the rear seats when purchased with a REAR PLUS option.

- The Bootliner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Bootliner extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around the headrest posts. (Blue arrows - Image 7)
-  Stick one loop fastener tab (Green arrow - Image 8)
- Attach the boot liner extension to the previously attached tab (Green arrow - Image 8)
- Repeat on opposite side

**Please Note: the Seat Flap, the Bumper Flap & the Bootliner Extension cannot be added at a later date.**

### STEP 6E. FREQUENT USE KIT

- If you frequently remove/install your boot liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Fitting Kit. These tabs are placed between the boot liner and the boot carpet. (Image 9 & 10)

The Frequent Use Kit is an accessory available to purchase from our on-line store.

