THE Hatchbag COMPANY

UK H0961 - SH2

Audi A5-Avant

2025 Onwards

Fitting Kit Contents

- [ ] Bootliner
  - 2 x 340 / 30
  - 2 x 370 / 30
  - 2 x 450 / 30
  - 4 x tabs
- [ ] Tailgate Cover
  - 22 x tabs

"quantity x length / width" in mm

*Please be aware that your bootliner may be different depending on your options/extras selection

Before you fit the bootliner

To ensure the self-adhesive fasteners securely adhere, it's ***absolutely essential*** to thoroughly ***eliminate*** any ***silicone*** residues left from manufacturing and valeting processes.

To achieve this you will need a silicone remover. We recommend ***Autoglym® Intensive Tar Remover****

*can be purchased from Halfords / Amazon amongst other retailers.

Preparations

-Ensure your boot floor and seats are set to match your order.

-Remove the load cover. It may be replaced later.

-Slide the seats as far back to the tailgate as possible, if applicable.

1

Fitting key

Where you find this symbol the bootliner's hook fastener will attach directly to the carpet [1]

When this is not suitable, we provide self-adhesive loop fasteners to stick onto plastic/metal trim:

Where you find this symbol, follow these steps:

1) Apply *Autoglym® Intenisve Tar remover** generously to a cloth and scrub the highlighted surface areas.

2) Dry surface thoroughly with a separate cloth until it drags.

3) Test the surface by attaching one fastener tab - it should stick well, if not repeat previous steps[2]

Silicone is used during car manufacturing/valeting, it will interfere with the adhesion.

*can be purchased from Halfords / Amazon amongst other retailers.

Tips:

- [1] If you frequently remove your boot liner from your vehicle consider our ***Frequent Use Fitting Kit*** to prevent carpet fluffing, available for purchase from our "*Accessories*" page.
- [2] If temperatures are low, run your car for a little bit so that the boot reaches room temperature or fit your liner once you have been out for a drive.
- For optimal adhesion of the fasteners, do not remove the bootliner for approx. 48 hours.

Notes:

- The adhesive fasteners ***cannot be used once they have been in contact with silicone.*** Replacement Fitting Kits can be purchased from our accessories page.
- Adherence to the instructions will affect the performance of the Fitting Kit. Please note *The Hatch-bag Company* will not accept requests for free replacements if the adhesives come loose after use.

Refer to colour code in the first page Fitting Kit Contents

2

-Ensure the base is aligned to fit the boot edges.

-Fasten the front panel to the seat back without pulling the base off the floor.

If you want to fold the rear seats later, you MUST unfasten the front panel first!

3

Tips:

- Snip the self adhesives to ease around the curves

4

*Please be aware that your boot liner may be different depending on your options/extras selection

Tips:

- Commence fitting from the tailgate end.
- For Rear Plus versions, fasten the side to the front panel from bottom to top

Optional extras

Note: not all the photos are specific to your vehicle

Bumper Flap

-Attach the Bumper Flap to the loop fastener strip located on the base of the boot liner.

Tailored Rear Seat Flap

-Lower the headrests.

-Attach the Seat Flap to the loop fastener strip located just below the headrest straps.

-Use additional flaps when folding seats.

Tailgate Cover

-Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck.

-Begin with the central top and bottom fastener.

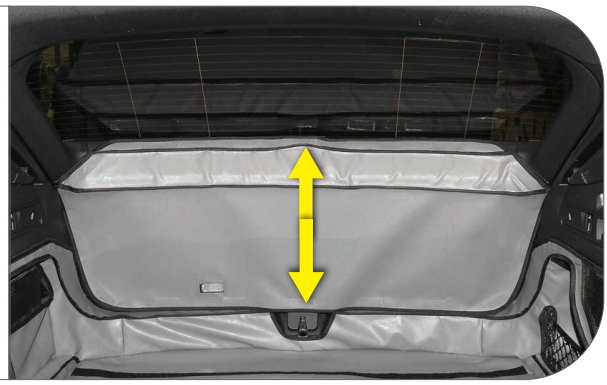

Bootliner Extension

1. Attach the Bootliner Extension to the main boot liner.
2. Fasten the hook & loop fastener straps around the headrest posts.
3. Fasten the two ties in the corner together.
4. Fasten ties to the corresponding rear seat striker loop.