

## VW T-Cross - 2019 Onwards

our ref: H0790

### PACKAGING REQUIREMENTS:

#### ☐ BOOT LINER

- **2 x 900 mm** 30mm wide self-adhesive loop fastener
- **1 x tabs** self-adhesive loop fastener

#### ☐ TAILGATE COVER

- **21 x tabs** self-adhesive loop fastener



FRSD Rear Plus boot liner prepped for a bumper flap (with front "D-ring" access option)



### VERY IMPORTANT PREPARATION



To ensure the self-adhesive hook & loop fastener stick to the plastic trim, you **MUST CLEAN** all grime from the plastic and **REMOVE** all **SILICONE** applied during manufacture and valeting.

To do this please:

1. Use a silicone remover, such as AutoGlym Intensive Tar Remover, and apply generously to the surface you want to adhere to.
2. Using a separate clean, dry cloth, thoroughly dry the surface until the cloth starts to drag. Attach one self-adhesive fastener tab to see if it sticks. (Repeat steps 1 and 2 if necessary.) Extra tabs have been provided.
3. Attach the self-adhesive fasteners and let them fully adhere over the next 24 hours for the best bond.

*\*The self-adhesive fasteners cannot be used once they have been in contact with silicone. Replacement kits are available on our website.*



Please note: not all of the photographs are specific to your vehicle

## STEP 1. PREPARATIONS

- Remove the load cover. It may be replaced later.
- Set the floor level to fit the specification of your order.

## STEP 2. FITTING THE BASE

- Place the boot liner into the car boot with the Hatchbag logo at the seat end. Flatten the base so it fits snugly against the edges. The hook fasteners on the back side attach directly to the carpet. (Image A)



## STEP 3. FITTING THE FRONT

- **PLUS / SPLIT VERSION ONLY** - Fasten the hook & loop fasteners between the side panels and the seat panel. (Image B)
- Starting with the middle headrest, fasten the hook & loop fastener straps around both headrest posts. (Image C). Make sure to hold the front part of the base in position to avoid pulling the boot liner too far up. Repeat the procedure with the left and right headrests.



## REAR PLUS VERSIONS

You **MUST** unfasten the hook & loop fasteners and the headrest straps before you recline the upper part of the rear seats. (Please refer to **REAR PLUS / SPLIT** options on website to see detailed photo.)


## STEP 4. FITTING THE SIDES

- Attach the hook fastener on the top edge of the boot liner sides directly onto the carpet along the top edge of the carpeted sides of the boot area. Begin positioning from the inner corner - see blue arrow (Image D)



## STEP 5. FITTING THE BACK

- Stick the 900 mm 30mm wide self-adhesive loop fastener to the tailgate edge of the boot area starting from the lock in the middle and running along the plastic and up along the sides (Image E - see blue highlights).
- Snip the self-adhesive fastener strips at the corners to ease around the curve. Attach the boot liner to it using the hook fastener on the liner.
- Repeat on opposite side.
- Stick 1 self-adhesive fastener tab to the inside center of the back panel, aligned with the hook fastener on the back panel of the boot liner. (Orange arrow - Image F)

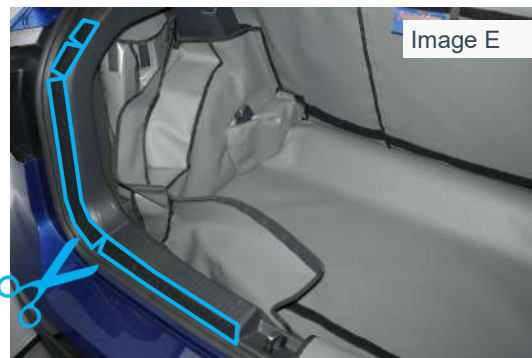

FRSD - left side - Rear Plus boot liner prepped for a bumper flap (with front "D-ring" access option)



FRSD - right side - Rear Plus boot liner prepped for a bumper flap (with front "D-ring" access option)



FLOW - left side - Rear Plus with Seat Splitboot liner, seat flap and bumper flap (prepared for a Bootliner Extension, and with front "D-ring" access option)

## OPTIONAL EXTRAS

Please note: the following photos are not specific to your vehicle.

### STEP 5A. SEAT FLAP

- The Seat flap is designed to protect the top of your rear seat giving additional protection from drooling dogs etc.
- The Seat Flap can also be used in conjunction with the **Rear Plus** or **Split** Option(s). With the rear seats in the folded position the Seat Flap extends the coverage forward. (Image 3)
- Lower the headrests
- Attach the Seat Flap to the loop fastener strip that has been manufactured into the Boot liner just below the top of the rear seats. (Image 1)
- The flap is then placed over the rear head rests and down the back of the passenger seats. (Image 2)
- If the Seat Flap sits over large headrests and obstructs your rear view: carefully create openings in the flap to accommodate the headrest posts.

### STEP 5B. TAILGATE COVER



Line up the tailgate cover with the tailgate and clean the areas where the self-adhesive loop fastener tabs will be stuck. (Image 4)

- Use the self-adhesive loop fastener tabs to attach the cover to the plastic trim.

### STEP 5C. BUMPER FLAP

- Fit the boot liner
- Attach the Bumper Flap to the loop fastener strip located at the base of the boot liner. (Image 5)
- The Bumper Flap either folds into the vehicle OR can be detached and stored elsewhere when you close the tailgate.



## OPTIONAL EXTRAS PAGE 2

Please note: the following photos are not specific to your vehicle.

### STEP 5D. BOOTLINER EXTENSION

The Bootliner extension provides superior protection for the rear seats when purchased with a REAR PLUS option. (image 6 & 7)

- The Bootliner extension is designed to attach to a Rear Plus/Split version liner.
- It provides additional protection for the back of the front seats and the extended floor area when the rear seats are folded flat.
- It does not offer full protection to the rear doors
- Attach the Bootliner extension to the main boot liner (Image 6)
- Fasten the two ties in the corner together (Orange arrows - Image 7)
- Fasten the hook & loop fastener straps around both headrest posts. (Blue arrows - Image 7)



**The Seat Flap 5A, the Bumper Flap 5C & the Bootliner Extension 5D cannot be added at a later date.**

### STEP 5E. FREQUENT USE KIT

- If you frequently remove/install your boot liner from/to your vehicle, please note that the carpet will “fluff” up – we offer an alternative Frequent Use Fitting Kit (image 8+9)

The Frequent Use Kit is available to from our on-line Store – simply add it to your order from the store. The kit can also be ordered at a later date.

